



Freedom II Copy and Paste Guide and Release Notes

Version: A

Last Edited: 11/16/2021

Approved By:

Garrett Swindell
Name

Product Engineer
(Title)

CURRENT DOCUMENT STATUS	
Document#	N/A
Version Number	A
File Name	Freedom II Copy and Paste Guide and Release Notes
Delivery Date	N/A
Owner	Black Box Corporation
Description	Guide, Log

REVISION HISTORY				
Revision	Version	Description of Change	Changed By	Effective Date
A	1.2	Initial Release	GWS	11/16/2021

Pre-Requisites to support Copy and Paste using Freedom


The following pre-requisites are required to be met before you can use this feature.

- A. Freedom II (4- or 8-Port) Firmware must be 2.10 or higher.
- B. Each computer / target using it needs to have the Copy and Paste Driver Installed (Windows Only)
- C. Freedom II web interface must have Copy and Paste enabled

Step 1: Update the Freedom II Firmware (or verify you are using 2.10 or higher).

Step 2: Install the Copy and Paste Driver on each computer needing this feature.

Step 3: Log into the Freedom II Web interface and go to Configuration>>Clipboard, and set the ports to use Copy and Paste and press the Save button.

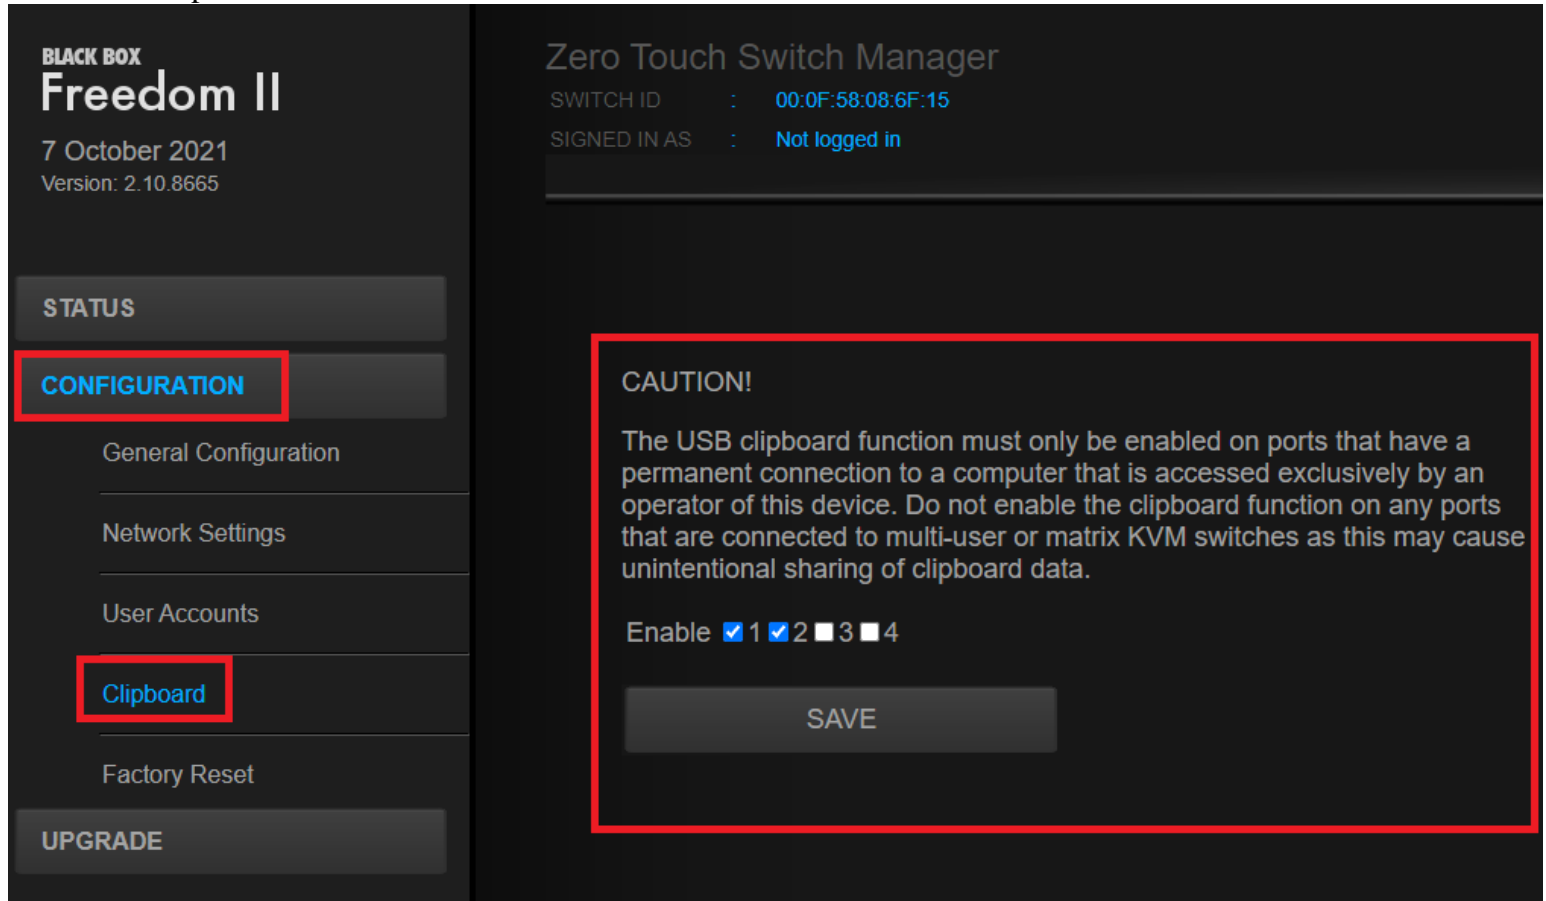

Installation

Follow the steps below to install the Black Box Copy and Paste software.

1. Install the BlackBox-USB-Clipboard 1.2 on each PC connected to the Freedom that will utilize this feature.
2. Locate the installation file and double click it.
3. Follow the on-screen instructions
4. Complete the configuration tool, ensure that configuration is the same on all PCs connected to the KV0004A-R2 and/or KV0008A-R2.

Software Release Notes

11/16/2021 (Version 1.2)

-Support for the KV0004A-R2 and KV0008A-R2 to copy and paste Text only up to a limited size.

-Know Issue: When changing configuration for clipboard settings in WEBUI, the Glide and Switch is deactivated. He work around I to use the hotkeys ALT + CTRL + F to turn them back on each time the setting is changed.