


CL1060A QUICK SETUP LOOPBACK TESTING ONLY

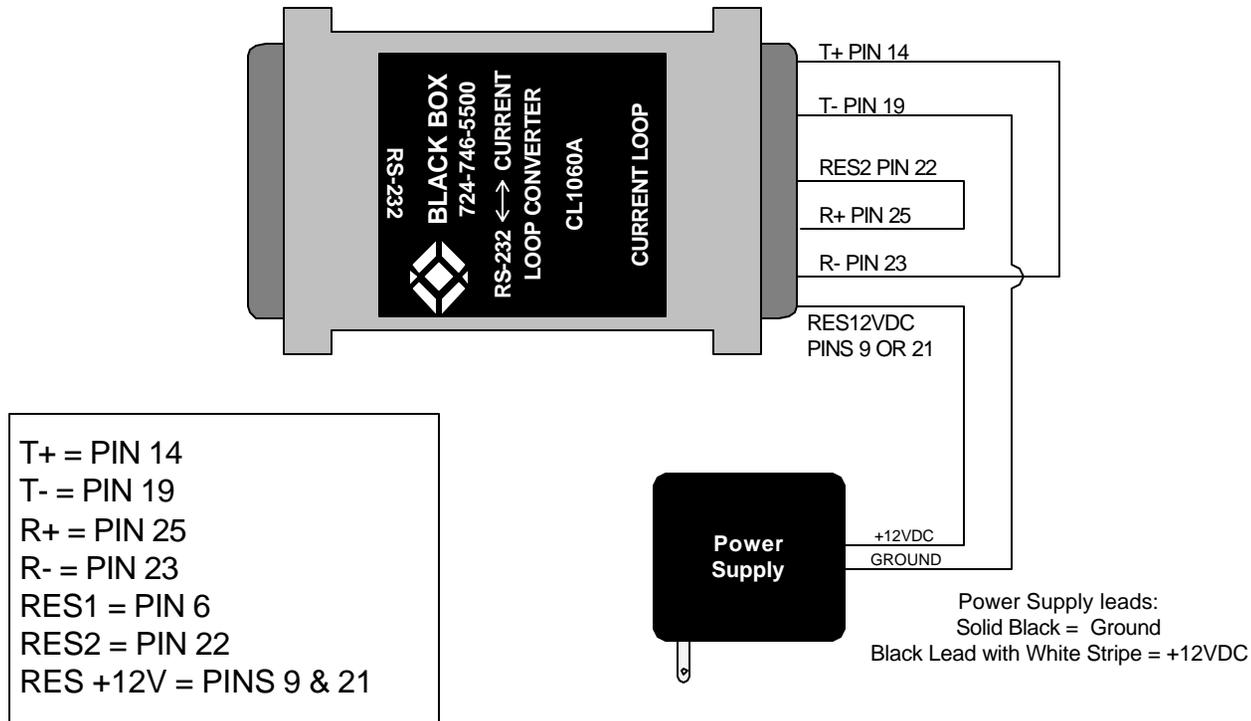

CL1060A can be ordered with a male or female DB25 Current Loop connector. The RS-232 connector is only DB25 female.

RS-232 Female/Current Loop Male = CL1060A-M-US
RS-232 Female/Current Loop Female = CL1060A-F-US