


CL1060A QUICK SETUP

ACTIVE TRANSMIT / ACTIVE RECEIVE

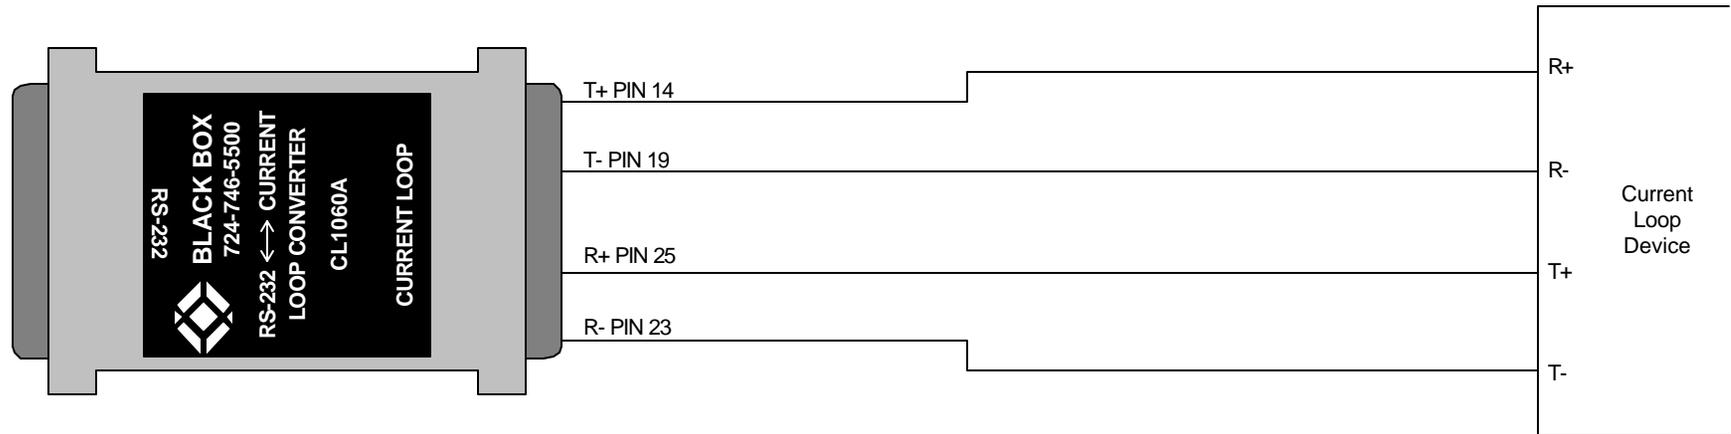

T+ = PIN 14
T- = PIN 19
R+ = PIN 25
R- = PIN 23
RES1 = PIN 6
RES2 = PIN 22
RES +12V = PINS 9 & 21

CL1060A can be ordered with a male or female DB25 Current Loop connector. The RS-232 connector is only DB25 female.

RS-232 Female/Current Loop Male = CL1060A-M-US
RS-232 Female/Current Loop Female = CL1060A-F-US