


# CL1060A QUICK SETUP

## PASSIVE TRANSMIT / ACTIVE RECEIVE

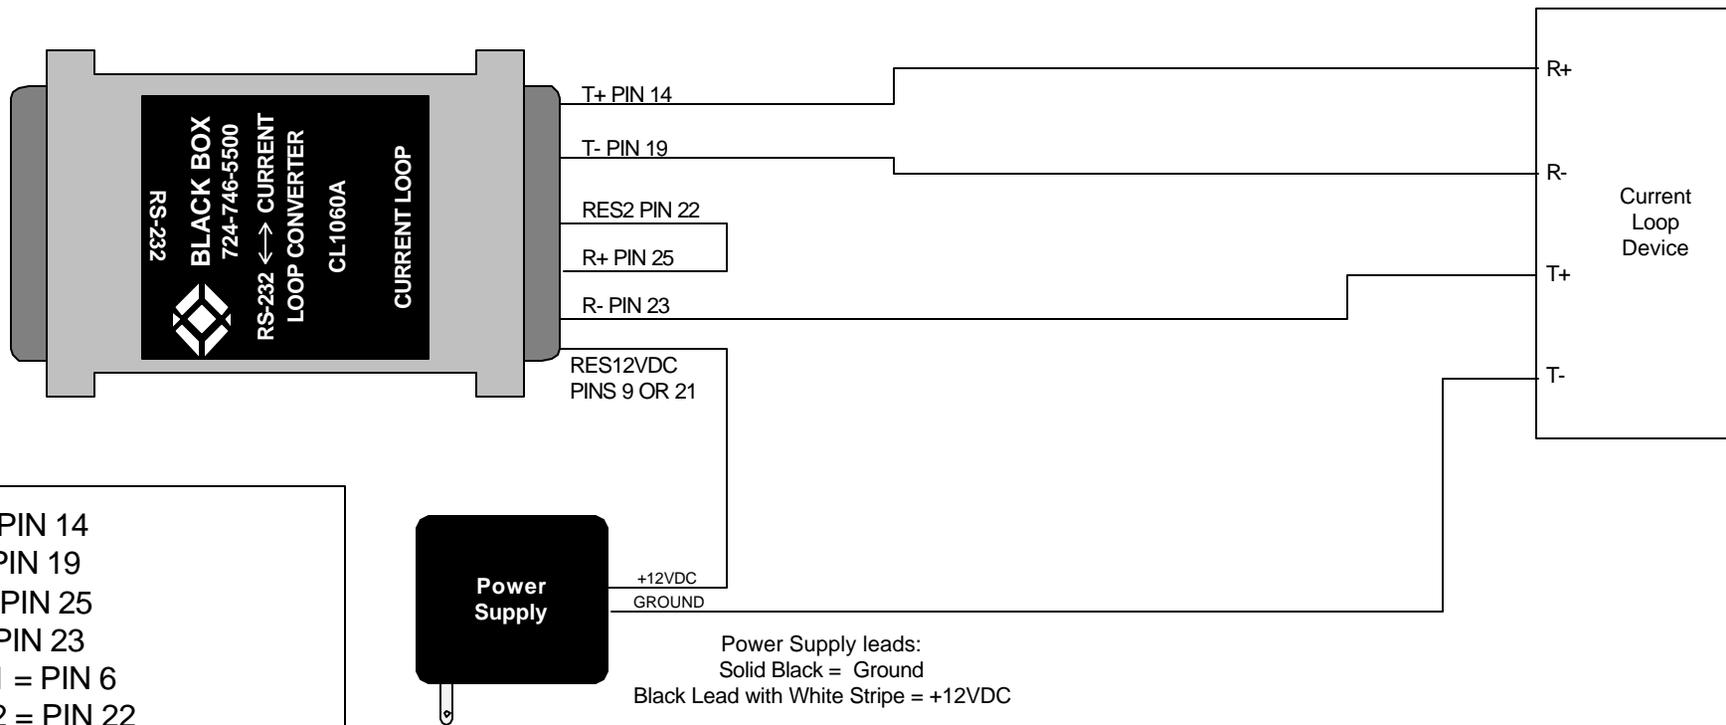

T+ = PIN 14  
T- = PIN 19  
R+ = PIN 25  
R- = PIN 23  
RES1 = PIN 6  
RES2 = PIN 22  
RES +12V = PINS 9 & 21

CL1060A can be ordered with a male or female DB25 Current Loop connector. The RS-232 connector is only DB25 female.

RS-232 Female/Current Loop Male = CL1060A-M-US  
RS-232 Female/Current Loop Female = CL1060A-F-US