

## Nokia 51/61/71 Cellular Phone Clip

### Operating Instructions

To attach the button (the small, round piece) to the phone, remove the battery and slip the metal "tongue" of the button into the slot at the top of the phone directly beneath the Nokia logo. Replace the phone's battery.

Use the belt clip with the button for safety and convenience of use. To attach the phone and phone clip to the belt clip, slide the phone clip's button into the groove in the belt clip. Slide it down until you hear it click into place. To remove the phone and button from the belt clip, press the button on the bottom of the belt clip. The patented mechanism gently releases the phone.

