

Ericsson 600 and 800 Cellular Phone Clip

Operating Instructions

When using these operating instructions, refer to the illustration on the back of this page.

The phone clip is suitable for use with original standard and slim batteries only. The support button (number 1 in the illustration; see the back of this page) is only used with the slim battery. The support button is stored in the underside of the phone clip button (number 2). To remove the support button, use a pen to push down in the small hole in the middle of the phone clip button (number 2).

When using the phone clip with a slim battery fitted to the phone, snap the support button (number 1) into the underside of the phone clip in the opening marked number 3. Snap the phone clip onto the phone, engaging the hooks (number 4) on the phone clip with the corresponding slots on the side of the phone's chassis.

Use the belt clip with the phone clip for safety and comfort in transportation. To attach the phone and phone clip to the belt clip, slide the phone clip's button into the groove in the belt clip. Slide it down until you hear it click into place. To remove the phone and phone clip from the belt clip, press the button on the bottom of the belt clip. The patented mechanism gently releases the phone.

