

Nokia 5100 Series




Changing Covers

1. Removing the battery.
 - a. Press and hold the button at the top of the battery.
 - b. Slide the battery toward the bottom of the phone.
 - c. Lift the battery off the phone.


2. Removing the cover.

- a. Using a coin, press the colored tab on top of the phone and slide the color cover forward.
- b. Separate the cover from the phone.
- c. Remove the rubber keypads from the cover.

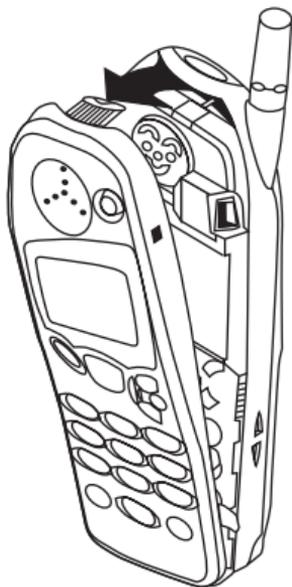

3. Installing the new cover.

- a. Place new rubber keypads on the inside of the new cover. Also apply the rubber on/off power button inside of the new cover.
- b. Reassemble the new cover, beginning at the button of the phone and end by snapping the top tab into place.
- c. Install the battery.

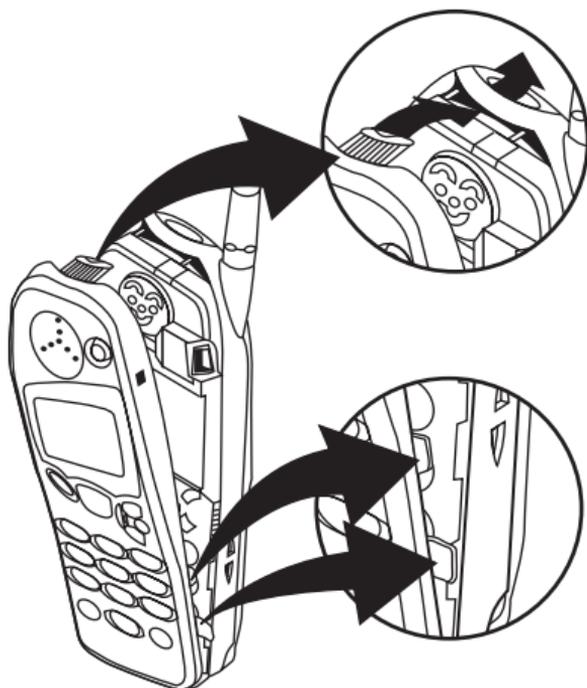

Installing the Faceplate

If you are NOT sure what phone model you own, remove the battery and read the label. This faceplate can only be used with Nokia Models beginning with 51.

1. Press the button on top of the phone next to the antenna and pull forward to separate the existing faceplate from the phone.

2. Take the foam pad covered in yellow paper and separate the foam pad into its four pre-divided sections. The first part is an open circle of approximately $\frac{1}{2}$ -inch diameter. Place this inside the new faceplate at the ear speaker. Place the $1\frac{1}{2}$ - x $\frac{1}{4}$ -inch square piece on the inside of the faceplate as a frame around the phone-number display. Discard the remaining unused pieces of foam (there should be two).
3. Remove the lens from the plastic bag. Remove the cellophane cover. Remove the tape covering and snap on the lens outside of the faceplate.
4. Press the flexible rubber ten-key touch-tone pad into the opening in back of the replacement housing. Also, put the rubber on/off power button inside of the replacement housing.
5. Re-assemble the replacement housing. Begin at the bottom of the phone and end by snapping the top tab into place.

