


Product Code

CP206A CP209A CP207A CP210A CP208A CP211A

Nokia 6100 Series


Changing Covers

- 1. Removing the battery.
 - a. Press and hold the button at the top of the battery.
 - b. Slide the battery toward the bottom of the phone.
 - c. Lift the battery off the phone.

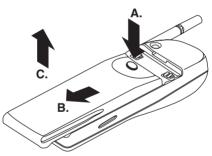

2. Removing the cover.

- a. Using the included torx screwdriver, remove the four screws on the back panel (shown below).
- b. Separate the cover from the phone.
- c. Remove the rubber keypads from the cover.

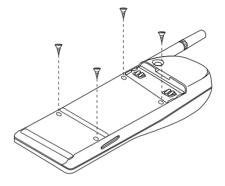

- 3. Installing the new cover.
 - a. Place the new rubber keypads into the new cover (shown below). Also apply the rubber on/off power button to the inside of the new cover.
 - b. Place the faceplate back into position on the phone.
 - c. Install the four screws into the back plate to secure the cover.
 - d. Install the battery.

