

You must remove a partial or earlier installation before you can reinstall the Silicom DoubleSerial PC Card. Before you remove an installation, make sure that the card is inserted in the PC Card slot.

- **To remove a partial or earlier installation:**

1. From the **Start** menu, select **Settings**.
2. Click **Control Panel** and double-click the **System** icon.
3. In the **System Properties** window, select the **Device Manager** tab and double-click **Multifunction Adapter**.
4. If available, Select **Silicom DoubleSerial PC Card** and click **Remove**.
5. Double-click **Other Devices**.
6. If available, select **Silicom DoubleSerial PC Card** and click **Remove**.
7. Click **OK**.
8. From the WINDOWS\INF directory, remove *PRTS2S.INF*
9. From the \\WINDOWS\INF\OTHER directory, delete the *MFS2S.INF* file.
10. From the Windows 98 System directory, delete the *S2SDRV.VXD* file ..
11. Shut down the computer.

- **To install the Silicom DoubleSerial PC Card under Windows 98:**

1. Start Windows 98.
2. Insert the Silicom DoubleSerial PC Card into the computer's PC Card slot. The **Add New Hardware Wizard** appears with the message **Silicom DoubleSerial PC Card**. **Note:** If Windows 98 fails to detect the adapter, check that PC Card support is enabled in the Windows 98 system. Enable if necessary and reboot the computer.
3. Insert the Silicom DoubleSerial PC Card distribution diskette and Click **Next**.
4. Select **Search for the best drivers for your device** and click **Next**.
5. Select the **Floppy disk drives** checkbox and click **Next**.
6. The message, **Silicom DoubleSeries PC Card is found** appears. Click **Next**.
7. Click **Finish**.
8. Restart your computer.  
*Installation is now complete!*