

ServSwitch Octopus Command Line Commands

bl...allows the user to activate boot loader

vcm cu.....Allows the user to increment the level of equalization on all colour guns

vcm cd.....allows the user to decrement the level of equalization on all colour guns

vcm resetreset the equalization settings to those calculated automatically

do vcm.....allows the equalization routine to be run without having to call up the OSD

rev hwPrints out the PCB revision to the serial port

rev dl.....Prints out the OSD logic revision to the serial port

rk.....resets keyboard

rm.....resets mouse

sw delay xxxsets switch delay in 0.001 sec units

set def res1....st native OS resolution to 1024 x 786@ 75 Hz

set def res 0.....set native OS resolution to 640 x 480 @60 hz (default resolution)