

Error notice to manual LBU2090.

Please note there is an error on the bottom of p.14 of the manual and it should read:

“When using the 75 Ohm interface, jumper straps JP2, JP5, JP6, and JP7

must be installed over the jumpers. The jumpers are located next to the BNC connectors.

Refer to the following section to open the case. Open the case and install jumper

straps for JP2, JP5, JP6, and JP7.

