

Read Me First

LGB1005A-R2 Packing List:

Before you start installing LGB1005A-R2 Managed Switch, please verify that the package contains the following items:

- 16-Port SFP + 8-Port Combo GbE L2 Plus Managed Switch
- AC Power Cord
- Mounting Accessory (for 19" Rack Shelf)
- User's Guide CD-ROM
- RS-232 Null Modem Cable

Please notify your sales representative immediately if any of the aforementioned items is missing or damaged.

Power Requirements : AC Line

Voltage	:	100~240 VAC
Frequency	:	50~60 Hz
Consumption	:	30W

Quick Installation :

1. Install the switch in the rack with mounting accessory.
2. Connect the LGB1005A-R2 switch to an AC power source.
3. The port 1–16 connector is SFP port on the switch. Use Fiber cable to connect between LGB1005A-R2 and end station.
4. The port 1– 8 includes two types of media --- TP and SFP fiber module; they support TP or fiber with auto-detected function.
5. Use RS-232 interface to pre-configure LGB1005A-R2 for network management.
For example: IP address, VLAN, Port Trunking, STP, etc.

LGB1005A-R2 switch's serial port default settings are listed as follows:

Baud rate	115200
Stop bits	1
Data bits	8
Parity	N
Flow control	none

The default values of LGB1005A-R2 switch are as follows:

IP Address	: 192.168.1.1
Subnet Mask	: 255.255.255.0
Default Gateway	: 192.168.1.254
Username	: admin
Password	: admin

User also can use telnet or web to pre-configure LGB1005A-R2 with the default IP address and username/password in the first configuration. Please refer to User's Guide contained in CD-ROM for details on the setting of parameters. LGB1005A-R2 user's manual is filed under the path: \manual of the CD-ROM.