




Pure Home Networking Blank Mounting Modules with Saddle Clips

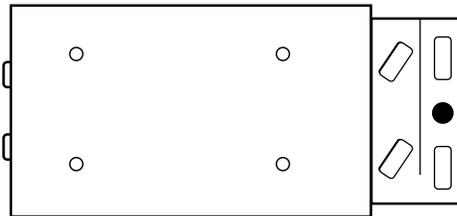

1. Specifications

Connectors: (4) saddle clips

Size: JHN2080A: 6"H x 6.3"W (15.2 x 16 cm);
JHN2081A: 6"H x 13.2"W (15.2 x 33.5 cm);
JPM1122A: 3"H x 6.3"W (7.6 x 16 cm)

Weight: JHN2080A: 0.7 lb. (0.3 kg);
JHN2081A: 1.3 lb. (0.6 kg);
JPM1122A: 0.3 lb. (0.1 kg)

2. Overview

The Pure Home Networking Blank Mounting Modules with Saddle Clips are available in three sizes. These modules should be installed in one of the Pure Home Networking Boxes (JHN1014A, JHN1020A, JHN1030A, or JHN1040A).

The Pure Home Networking Module with Saddle Clips, 1 Unit Half Size is pictured in Figure 2-1.

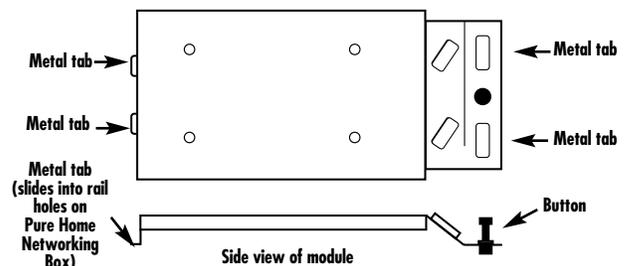


Figure 2-1. The JPM1122A.

The Pure Home Networking Module with Saddle Clips, 2 Unit, Half Size is pictured in Figure 2-2.

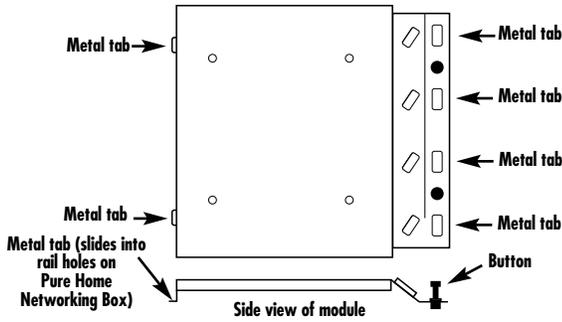


Figure 2-2. The JHN2080A.

The Pure Home Networking Module with Saddle Clips, 2 Unit, Full Size is pictured in Figure 2-3.

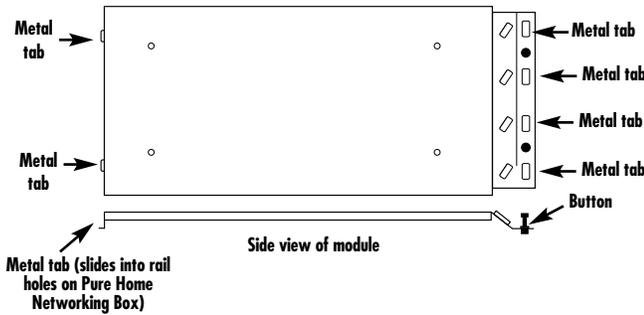


Figure 2-3. The JHN2081A.

3. Installation

3.1 Cable Handling Guidelines

- Do not route telephone cables through the same cable holes as the AC power cables.
- For safety, separate all telephone cables from parallel AC power lines by at least 6 inches

(15.2 cm) whenever possible. Avoid kinking the cable.

- Do not attach cable tie-downs too tightly. The cable-fastening hardware should not compress the cable sheath.
- Do not bend the cable sharply. Place the cables properly in the cable management after passing them through the holes, since the edges of the hole can compress or damage the cable sheath.
- When installing an individual module in the Pure Home Networking Box, place it above or below the interfacing module (if possible). This will eliminate excessive cable crossing.
- For your safety, do not use this or any electrical product near water (unless it is specifically designed for wet areas). Do not install wiring during thunder and lightning storms.
- Use caution when handling or installing any computer, telephone, video, or electrical devices.

3.2 Installing a Module in the Pure Home Networking Box

1. Determine the area for installation.
2. Position the metal tabs on the left side of the module at a 45-degree angle and slide them into the rail holes on the Pure Home Networking Box (see Figures 2-1 through 2-3).
3. Insert the metal tabs on the right side of the module into the rail.
4. Press the button to fasten the module to the Pure Home Networking Box.

3.3 Removing a Module from the Pure Home Networking Box

1. Press the button and hold it in while pulling the module from the Pure Home Networking Box.
2. Swing the module out.

Any trademarks mentioned in this manual are acknowledged to be the property of the trademark owners.

© Copyright 2005. Black Box Corporation. All rights reserved.