

M Tu 9005

> status

Name: <not set>

Timeslot: 0.....7 8.....15 16....23 24....31 Rate
Current: 00000000 00000000 00000000 00000000 00K

	LOOP	TS0	TS16	MCLK	CRC4	IMP	CINV	DINV	TTC
Current:	OFF	ON	ON	OFF	OFF	120R	OFF	OFF	OFF

STATUS:

LOI = BAD LOS = BAD LOI-10 = BAD
SER = X.21 DTR = BAD LOOPSW = OFF

> mclk on

Changed> ststus

Command not found

Changed> status

Name: <not set>

Timeslot: 0.....7 8.....15 16....23 24....31 Rate
Current: 00000000 00000000 00000000 00000000 00K
Changed: 00000000 00000000 00000000 00000000 00K

	LOOP	TS0	TS16	MCLK	CRC4	IMP	CINV	DINV	TTC
Current:	OFF	ON	ON	OFF	OFF	120R	OFF	OFF	OFF
Changed:	OFF	ON	ON	ON	OFF	120R	OFF	OFF	OFF

STATUS:

LOI = BAD LOS = BAD LOI-10 = BAD
SER = X.21 DTR = BAD LOOPSW = OFF

Changed> tsen all

Syntax error

Changed> status

Command not found

Changed> tsen all

Changed> status

Name: <not set>

Timeslot: 0.....7 8.....15 16....23 24....31 Rate
Current: 00000000 00000000 00000000 00000000 00K
Changed: 01111111 11111111 11111111 11111111 1984K

	LOOP	TS0	TS16	MCLK	CRC4	IMP	CINV	DINV	TTC
Current:	OFF	ON	ON	OFF	OFF	120R	OFF	OFF	OFF
Changed:	OFF	ON	OFF	ON	OFF	120R	OFF	OFF	OFF

STATUS:

LOI = BAD LOS = BAD LOI-10 = BAD
SER = X.21 DTR = BAD LOOPSW = OFF

Changed> status

Name: <not set>

Timeslot: 0.....7 8.....15 16....23 24....31 Rate
Current: 00000000 00000000 00000000 00000000 00K
Changed: 01111111 11111111 11111111 11111111 1984K

	LOOP	TS0	TS16	MCLK	CRC4	IMP	CINV	DINV	TTC
Current:	OFF	ON	ON	OFF	OFF	120R	OFF	OFF	OFF
Changed:	OFF	ON	OFF	ON	OFF	120R	OFF	OFF	OFF

STATUS:

LOI = BAD LOS = BAD LOI-10 = BAD
SER = X.21 DTR = BAD LOOPSW = OFF

Changed> tsen 0

Changed> status

Name: <not set>

Timeslot: 0.....7 8.....15 16....23 24....31 Rate
Current: 00000000 00000000 00000000 00000000 00K
Changed: 11111111 11111111 11111111 11111111 2048K

	LOOP	TS0	TS16	MCLK	CRC4	IMP	CINV	DINV	TTC
Current:	OFF	ON	ON	OFF	OFF	120R	OFF	OFF	OFF
Changed:	OFF	OFF	N/A	ON	N/A	120R	OFF	OFF	OFF

STATUS:

LOI = BAD LOS = BAD LOI-10 = BAD
SER = X.21 DTR = BAD LOOPSW = OFF

Changed> update

Unsaved> save

> status

Name: <not set>

Timeslot: 0.....7 8.....15 16....23 24....31 Rate
Current: 11111111 11111111 11111111 11111111 2048K

	LOOP	TS0	TS16	MCLK	CRC4	IMP	CINV	DINV	TTC
Current:	OFF	OFF	N/A	ON	N/A	120R	OFF	OFF	OFF

STATUS:

LOI = BAD LOS = N/A LOI-10 = BAD
SER = X.21 DTR = BAD LOOPSW = OFF

> tsen all

Changed> status

Name: <not set>

Timeslot: 0.....7 8.....15 16....23 24....31 Rate
Current: 11111111 11111111 11111111 11111111 2048K

Changed: 11111111 11111111 11111111 11111111 2048K

	LOOP	TS0	TS16	MCLK	CRC4	IMP	CINV	DINV	TTC
Current:	OFF	OFF	N/A	ON	N/A	120R	OFF	OFF	OFF
Changed:	OFF	OFF	N/A	ON	N/A	120R	OFF	OFF	OFF

STATUS:

LOI = BAD LOS = N/A LOI-10 = BAD
SER = X.21 DTR = BAD LOOPSW = OFF

Changed> update

Unsaved> save

G703 BNC

POWER INPUT

DTE Connector


SW 2

G703 RJ45


SW 1



X 21



LK



V35



LK 6

LK 12


LK 9

LK 5

LK 1

LK 2

LK 3

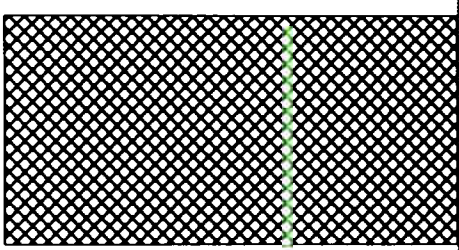

Note: Links 5, 6, 9, and 12 are parked for X21