


*Desktop*  
**Telephony**  
from  **BLACK BOX**

# Cradle Lifter


HS514

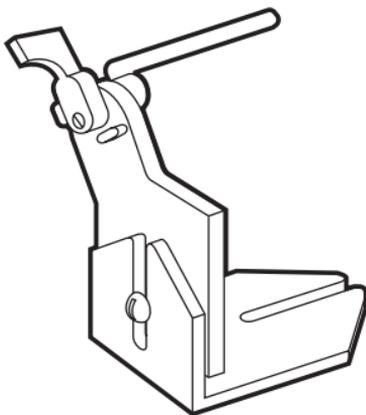

To install the Cradle Lifter, follow these instructions and refer to the illustration on **page 3**.

- 1) Line up the Cradle Lifter next to your phone (leave the Velcro® on). The lift rod should be flush with the listening portion of your telephone handset. Make sure that the Cradle Lifter is not lifting your handset while you make adjustments, since lifting the handset is what activates the phone.
- 2) Next, see how high the Cradle Lifter needs to be raised to ensure that you get a good dial tone. Once you have the Lifter at a good position, attach a piece of Velcro to the side of your phone. Remove the Velcro from the Cradle Lifter and attach it to the phone.
- 3) If the Cradle Lifter is having difficulty supporting your phone, attach the optional Brace Unit to the side of your Cradle Lifter. The Brace Unit is slotted on both ends to allow a full range of adjustment.
- 4) On some phones you may need to put an additional small piece of Velcro under the phone so that the Cradle Lifter will perform optimally.

To receive a call, just pull the Cradle Lifter lift rod handle toward you. (This will raise the handset.) To hang up, just push it back into the down position.

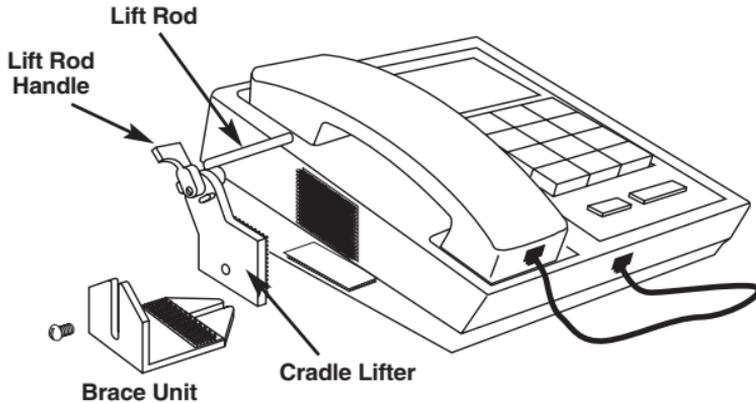

## **TRADEMARKS USED IN THIS MANUAL**

Velcro is a registered trademark of Velcro USA Inc.

Any other trademarks mentioned in this manual are acknowledged to be the property of the trademark owners.



**CUSTOMER SUPPORT INFORMATION**

Order **toll-free** in the U.S.: Call **877-877-BBOX** (outside U.S. call **724-746-5500**)  
FREE technical support 24 hours a day, 7 days a week: Call **724-746-5500** or fax **724-746-0746**  
Mailing address: **Black Box Corporation**, 1000 Park Drive, Lawrence, PA 15055-1018  
Web site: [www.blackbox.com](http://www.blackbox.com) • E-mail: [info@blackbox.com](mailto:info@blackbox.com)

© Copyright 2000. Black Box Corporation. All rights reserved.

54-0228A

July 2000

Printed in the USA