



Intelligent 4 Band VDSL

24 Ports Managed IP DSLAM with 2 Giga Ethernet

USER'S MANUAL

Copyright

Copyright © 2007 All rights reserved.

Trademarks

Other brand and product names are registered trademarks or trademarks of their respective holders.

Legal Disclaimer

The information given in this document shall in no event be regarded as a guarantee of conditions or characteristics. With respect to any examples or hints given herein, any typical values stated herein and/or any information regarding the application of the device, we hereby disclaims any and all warranties and liabilities of any kind, including without limitation warranties of non-infringement of intellectual property rights of any third party.

Statement of Conditions

In the interest of improving internal design, operational function, and/or reliability, we reserve the right to make changes to the products described in this document without notice. We do not assume any liability that may occur due to the use or application of the product(s) or circuit layout(s) described herein.

Maximum signal rate derived from IEEE Standard specifications. Actual data throughput will vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, and network overhead lower actual data throughput rate.

VDSL Solution

The VDSL networking solution delivers Cost-effective, high-performance broadband access to multi-unit buildings (hotels, apartment, and multi-tenant unit office buildings) and enterprise campus environments such as manufactories, educational campuses, and medical facilities. VDSL technology dramatically extends Ethernet over existing Category 1/2/3 wiring at speeds of 5/15/25 Mbps (full duplex) and distances up to 1700/1100/600 meters. The VDSL technology delivers broadband service on the same lines as Plain Old Telephone Service (POTS), digital telephone, and ISDN system. In addition, VDSL supports modes compatible with symmetric digital subscriber line, allowing service providers to provision VDSL to buildings where broadband services already exist.

The VDSL solution includes (24 ports VDSL IP DSLAM), and VDSL Modem for Customer Premise Equipment (CPE) device.

The VDSL solution delivers everything needed to quickly deploy an Ethernet-based network with the performance required to deliver high-speed Internet access at much greater distances and drive services like IP telephony and audio/video streaming. With this technology, a broad range of customers can benefit from lower operating Costs and rapid deployment. The VDSL solution provides multicast, Layer 2 quality of service (QoS), Link Aggregation (LACP) dynamic trunking groups, security, GVRP, IGMP for VOD (Video on demand) and SNMP RMON management and Web-based Switch network management.

The 24 ports VDSL IP DSLAM is a bridge between external Internet backbone through a router for IP sharing and the building 110D telephone rack or telephone box. It utilizes the available telephone wire to enable high-speed Internet access to building's residents.

Intelligent 4 Band VDSL 24 Ports Managed IP DSLAM USER'S MANUAL Ver. A.1

The 24 ports VDSL IP DSLAM uses the phone line networking technology endorsed by the VDSL (Very High Data Rate DSL), and the 24 ports VDSL IP DSLAM utilizes the already existing telephone wire to deliver 5/15/25 Mbps Internet access on each RJ-21 port.

This gives users a low-Cost, end-to-end solution and eliminates the need to train installation teams on multiple systems.

24 Ports VDSL + 2 Giga Ethernet

The 24 ports VDSL IP DSLAM provide 1 x RJ-21 (24 x POTS Ports) with splitter on board, 1 x RJ-21 (24 x VDSL Ports) and 2 x 10/100/1000Mbps auto-sensing RJ-45. The 24 ports VDSL IP DSLAM is a rack-unit (1.5RU) high, 299 mm deep. It is a standard 19" Rack mounted size. The 24 ports VDSL IP DSLAM delivers dedicated bandwidth per port at rates up to 25 Mbps. VDSL transmissions coexist with POTS and ISDN, and can be compatible with ADSL/HomePNA traffic in the same building. This VDSL IP DSLAM can be configured on a per-switch basis to support the following modes:

5/10/15 Mbps symmetrical rate (up to 1700 / 1100 / 600 meters) and speed rate control from 100k up to 25Mbps. The 24 ports VDSL IP DSLAM and VDSL Modem provide fast and easy connectivity into building patch panels with RJ-21 connector. The 10/100/1000 Ethernet ports can be used to connect servers, Ethernet switches. These connectivity options provide multiple price/performance options to meet building and budget requirements.

Intelligent 4 Band VDSL 24 Ports Managed IP DSLAM USER'S MANUAL Ver. A.1

The 24 ports VDSL IP DSLAM provides the important features necessary for robust networks:

- **Quality of Service:** Supports 802.1p QoS. Provides high-and low-priority queuing on a per-port basis.
- **Supports IGMP:** Snooping by 512 IP multicast table for VOD (Video on demand) and Video Conference and Internet games application.
- **Scalability:** Supports bandwidth control from 100k to **5/15/25** Mbps symmetric performance over single-pair wiring. Fast Ethernet Channel port aggregation.
- **Security: 802.1Q Tag base and port-based** virtual local-area network (VLAN) support. Private VLAN access, assuring port security without requiring a VLAN per port, and also **Supports MAC filtering to Lock MAC address and 802.1V Protocol V-Lan**
- **In band Management:** 24 ports VDSL IP DSLAM provides a console port for setup IP or other function
- **Out of Band Management:** 24 ports VDSL IP DSLAM support remote control by Telnet and Web-based Management easy-to-use configuration and ongoing monitoring. This software is embedded in the 24 ports VDSL IP DSLAM and delivers remote, intuitive management of 24 ports VDSL IP DSLAM and connected VDSL CPE devices through a single IP address. The 24 ports VDSL IP DSLAM is easy-to-configured and deployed, and offering a compelling option in terms of cost, performance, scalability and services compared to traditional ATM-based xDSL solutions.
- **Speed Rate Control:** 24 ports VDSL IP DSLAM supports speed rate control function, from 100k to 5/15/25Mbps.
- **IEEE-802.1x:** port base network access control, this function for wireless users connecting Authentication
- **Spanning tree:** Supports IEEE802.1d for MAC bridge and link redundant.
- **DHCP Client:** Dynamic Host Configuration Protocol (DHCP) for auto configure management IP.
- **TFTP Protocol:** Trivial File Transfer Protocol (TFTP) for new version firmware remote upgraded
- **SNR indication:** Signal to Noise Ratio (SNR) for check phone wiring quality and cross talk for offering wiring information to engineer.

Intelligent 4 Band VDSL 24 Ports Managed IP DSLAM USER'S MANUAL Ver. A.1

- **FAN & Temperature Monitor:** This is a monitoring function for the cooler FAN speed and inner temperature status, if the FAN stops or the temperature is over 70°C, the alarm trap will be sent via SNMP.
- **SNMP MIB Supports:** RFC-1213 MIBII, RFC-1493 Bridge MIB, RFC-1643 Ether like MIB, RFC-1757 RMON MIB / groups 1,2,3,9, Enterprise MIB.
- **Giga port auto link supports:** This function can be auto sensing client interface media with Copper or fiber optic and link one and supports hot swap.
- **Alarm:** In order to make sure the system is working normally, the 24 ports VDSL IP DSLAM provides Fan and Temperature monitor and management, you can see through WEB or Telnet which shows the internal temperature and fan speed, if the temperature exceeds 70°C or the fan stops working, the VDSL IP DSLAM will send a SNMP trap to inform the Trap management server.
- **Hacker prevention:** To avoid hacker to enter management system through client side (CPE), the 24 ports VDSL IP DSLAM will filter system IP from client side.
- **Supports multiple web browsers:** IE, Mozilla & Netscape under Windows O/S Mozilla & Netscape under Linux O/S

Safety Warnings

For your safety, be sure to read and follow all warning notices and instructions before device use.

- DO NOT open the device or unit. Opening or removing covers can expose you to dangerous high voltage points or other risks. ONLY qualified service personnel can service the device. Please contact your vendor for further information.
- Use ONLY the dedicated power supply for your device. Connect the power cord or power adaptor to the right supply voltage (110V AC in North America or 230V AC in Europe).
- DO NOT use the device if the power supply is damaged as it might cause electrocution. If the power supply is damaged, remove it from the power outlet. DO NOT attempt to repair the power supply. Contact your local vendor to order a new power supply.
- Place connecting cables carefully so that no one will step on them or stumble over them. DO NOT allow anything to rest on the power cord and do NOT locate the product where anyone can work on the power cord.
- DO NOT install nor use your device during a thunderstorm. There may be a remote risk of electric shock from lightning.
- DO NOT expose your device to dampness, dust or corrosive liquids.
- DO NOT use this product near water, for example, in a wet basement or near a swimming pool.
- Connect ONLY suitable accessories to the device. Make sure to connect the cables to the correct ports.
- DO NOT obstruct the device ventilation slots, as insufficient airflow may harm your device.
- DO NOT store things on the device.
- DO NOT use the device outside, and make sure all the connections are indoors. There may be a remote risk of electric shock from lightning.
- Be careful when unplugging the power, because the transformer may be very hot.
- Keep the device and all its parts and accessories out of children's reach.
- Clean the device using a soft and dry cloth rather than liquid or atomizers. Power off the equipment before cleansing it.
- This product is recyclable. Dispose of it properly.

Contents

Copyright	1
VDSL Solution	2
24 Ports VDSL + 2 Giga Ethernet	4
Safety Warnings	7
Contents	8
1. Unpacking Information	11
Check List	11
2. Installing the IP DSLAM	12
Hardware Installation	12
Pre-installation Requirements	12
General Rules	13
Connecting the IP DSLAM	13
Connecting Ethernet Port	14
Connecting VDSL Ports	14
3. Hardware Description	16
Front Panel	16
Front Indicators	17
Rear Panel	18
4. Management Configuration	19
4.1 In-Band Management	19

Intelligent 4 Band VDSL 24 Ports Managed IP DSLAM USER'S MANUAL Ver. A.1

4.2 Remote Network Management.....	24
4.3 Web Basic Management.....	26
4.3.1 Port Status.....	26
4.3.2 Port Statistics.....	27
4.3.3 TFTP Update.....	28
4.3.4 TFTP Backup.....	29
4.4 Web Administrator Management.....	30
4.4.1 IP Address	30
4.4.2 Switch Settings	31
4.4.3 Port Location.....	34
4.4.4 Port Controls.....	35
4.4.5 Trunking	36
4.4.6 Filter Database	40
4.4.7 Vlan Config.....	43
4.4.8 Spanning Tree.....	50
4.4.9 Port Sniffer	53
4.4.10 Snmp.....	54
4.4.11 Security Manager.....	56
4.4.12 802.1X Config	57
4.4.13 Modem Location	59
4.4.14 Reset System	60
4.4.15 Reboot	60
5. Applications	61

Intelligent 4 Band VDSL 24 Ports Managed IP DSLAM USER'S MANUAL Ver. A.1

Appendix A: RJ-21 Telco ports distribution 64

Appendix B: VDSL Spectrum 66

Key Features & Benefits 67

Product Specification 68

Appendix D: Example of VLAN Setting 69

Appendix E: Troubleshooting 76

Diagnosing VDSL Indicators 76

System Diagnostics 78

Appendix F: Compliance and Safety Information 80

Warranty 83

1. Unpacking Information

Check List

Carefully unpack the package and check its contents against the checklist.

Package Contents

- 24 ports VDSL IP DSLAM
- User Manual CD
- AC Power cord
- 2x Rack Mounting Brackets
- 8x Screws for Brackets
- 4x Plastic feet
- 2x 1.5m RJ-21 male-to-male Telco connector wire (Option Parts)

Please inform your dealer immediately for any missing, or damaged parts.

If possible, retain the carton, including the original packing materials.

Use them to repack the unit in case there is a need to return for repair.

2. Installing the IP DSLAM

Hardware Installation

This chapter describes how to install the 24 ports VDSL IP DSLAM to establish network connection. You may install the IP DSLAM on any level surface (table, shelf, 19 inch rack or wall mounting). However, please take note of the following minimum site requirements before you begin.

Pre-installation Requirements

Before you start actual hardware installation, make sure you can provide the right operating environment, including power requirements, sufficient physical space, and proximity to other network devices that are to be connected. Verify the following installation requirement:

Verify the following installation requirements:

- Power requirements: AC 100V to 240 V at 50 to 60 Hz.
The Switch power supply automatically adjusts to the input voltage level.
- The IP DSLAM should be located in a cool dry place, with at least 10cm/4in of space at the front and back for ventilation.
- Place the IP DSLAM out of direct sunlight, and away from heat sources or areas with a high amount of electromagnetic interference.
- Check if network cables and connectors needed for installation are available

General Rules

Before making any connections to the IP DSLAM, note the following rules:

- Ethernet Port (RJ-45)
All network connections to the IP DSLAM Ethernet port must be made using Category 5 UTP for 100Mbps, Category 3, 4 UTP for 10Mbps.
No more than 100 meters of cabling may be use between the IP DSLAM or HUB and an end node.
- VDSL Port (RJ-21)
All Home network connections to VDSL
1 X RJ-21 Cable (Male to Male) Using Pin 1 ~ 24, 26 ~ 49
RJ-21 Pin25 & 50 are not used.

Connecting the IP DSLAM

The 24-port VDSL IP DSLAM has 2 x GIGA Ethernet supporting full or half-duplex operation. The transmission mode is using auto-negotiation. Therefore, the devices attached to these ports must support auto-negotiation unless they will always operate at half duplex. If transmissions must run at full duplex, but the attached device does not support auto-negotiation, then you should upgrade this device to a newer version that supports auto-negotiation.

Use “25” port connect to devices such as server, bridge or router. You can also cascade to another compatible MUX or hub by connecting the 26 port to the other device.

Connecting Ethernet Port

Ethernet Port “25” and “26” support auto MDI/MDIX.

You can connect the “25 or 26” port on the IP DSLAM to any device that uses a standard network interface such as a Cable modem, ADSL modem, Ethernet Switch, workstation or server, or also to a network interconnection device such as a bridge or router (depending on the port type implemented).

Prepare straight through (or cross over) shielded or unshielded twisted-pair cables with RJ-45 plugs on both ends. Use 100Ω Category 5 cable for connections. Connect one end of the cable to “25” port of the IP DSLAM, and the other end to a standard RJ-45 station port on cable modem, ADSL router, wireless bridge, etc. When inserting an RJ-45 plug, be sure the tab on the plug clicks into position to ensure that it is properly seated.

Notes: Make sure the length of twisted-pair cable is not over 100 meters (328 feet).

Connecting VDSL Ports

1. Prepare the network devices you wish to connect. Make sure you have installed suitable VDSL Modem before making a connection to any of the IP DSLAM (1-24) station ports. You also need to prepare one 18 ~ 26 gauge twisted pair phone Line wiring with RJ-21 plugs at both ends.
2. Connect one end of the cable to the RJ-21 port of the Home Access network adapter, and the other end to any available (1~24) station port on the VDSL. Every port supports 5/15/25 Mbps connections. When inserting an RJ-21 plug, be sure the tab on the plug clicks into position to ensure that it is properly seated.
 - Instead, use only twisted-pair cables with RJ-45 connectors that conform the FCC standards.

Intelligent 4 Band VDSL 24 Ports Managed IP DSLAM USER'S MANUAL Ver. A.1

Notes:


1. Be sure each twisted-pair cable (RJ-45) does not exceed 100 meters (333 feet).
2. RJ-11 port use 18 ~ 26 gauge phone wiring, we do not recommend 28 gauge or above.
3. We advise using Category 5 cable for Cable Modem or Router connections to avoid any confusion or inconvenience in the future when you upgrade attached to high bandwidth devices.

3. Hardware Description

This section describes the important parts of the 24 ports IP DSLAM. It features the front indicators and rear connectors.

Front Panel

The following figure shows the front panel.

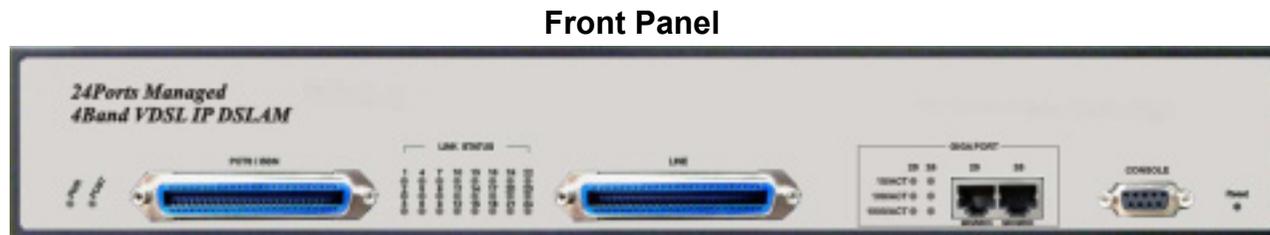

The 24 ports VDSL IP DSLAM has embedded Splitter between every VDSL side and POTS side. It permits you can deliver broadband service on the same lines as Plain Old Telephone Service (POTS), ISDN traffic and VDSL Signal.

Several LED indicators for monitoring the device itself, and the network status. At a quick glance of the front panel, the user would be knew if the product is receiving power; if it is monitoring another IP DSLAM or other devices; or if a problem exists on the network.

The 24-port VDSL IP DSLAM provides one 10/100/1000Mbps auto-sensing RJ-45 Ethernet port as Ethernet expansion port and one 10/100/1000 RJ-45 trunk port with auto link function.

Front Indicators

The 24 ports IP DSLAM has many LED indicators. The following Table shows the description.

LED Indicators Description and Operation

LEDs	Color	Status	Descriptions
PWR (Power LED)	Green	On	The device is receiving the power and functioning properly.
		Off	The device is not ready or has malfunctioned.
POST (Power On Self Test LED)	Green	On	The device is receiving the power and functioning properly.
		Off	The device is not ready or has malfunctioned.
LINK STATUS (24 Ports LED)	Green	On	Port is in good linkage.
		Off	The VDSL connection is down.
10/100/1000ACT (GIGA PORT LED)	Green	On	GIGA Port is in one of the speed with good linkage.
		Off	The GIGA Port connection is down.

Rear Panel

The following figure shows the rear connectors.

Rear connectors



The power cord should be plugged into AC Power Socket. It accepts AC power from 100 to 240 voltages.

4. Management Configuration

4.1 In-Band Management

Console Port (RS-232) Configuration (Change IP Address via Hyper-Terminal)

1. Connect IP DSLAM with PC/Laptop's RS-232 port, using "Hyper-Terminal" in the Windows™ system.



Set "Bits per second" at **9600** to the content window.


Set "Flow control" at None

Intelligent 4 Band VDSL 24 Ports Managed IP DSLAM USER'S MANUAL Ver. A.1

2. After login window show on the screen, it will ask for Login Name and Password.

Login Name: **admin**, Password: **123**

Main Manual window will show on the screen as the following:

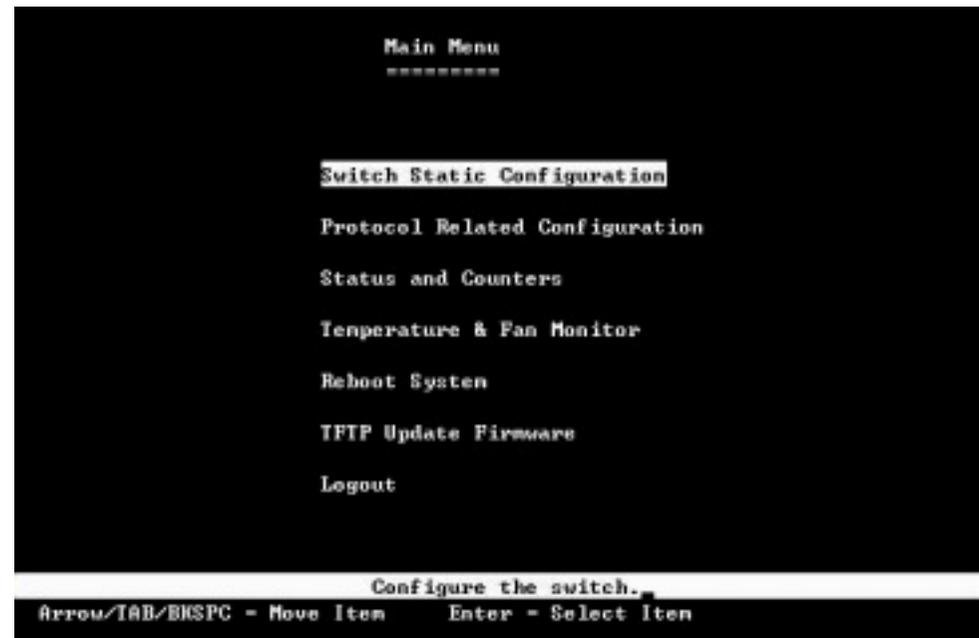

Operation:

Arrow/Tab/Backspace = Move light bar to select Item

Enter = Select Item

Intelligent 4 Band VDSL 24 Ports Managed IP DSLAM USER'S MANUAL Ver. A.1

3. Set IP Address:

- (1) Select "**Switch Static Configuration**" to enter the Switch Configuration page.
- (2) Select "**Administration Configuration**" to enter the Device Configuration page



Intelligent 4 Band VDSL 24 Ports Managed IP DSLAM USER'S MANUAL Ver. A.1

(3) Select “**IP Configuration**” to enter the IP configuration page



Intelligent 4 Band VDSL 24 Ports Managed IP DSLAM USER'S MANUAL Ver. A.1

(4) In the “**IP Configuration**”, it allows user to setup the DHCP, IP Address, Subnet Mask and Gateway.

```
Intelligent Switch : IP Configuration
*****

      DHCP      : Disabled

      IP Address : 192.168.16.230

      Subnet Mask : 255.255.255.0

      Gateway    : 192.168.16.1

actions->  <Edit>      <Save>      <Quit>
          Select the action menu.
Arrow/TAB/BNSPC - Move Item  Quit - Previous menu  Enter - Select Item
```

- a. Select **<Edit>** to Change IP address, Subnet Mask and Gateway
- b. Select **<Save>** to save the configuration and go back to System Configuration page
- c. Select **<Quit>** to go back to the previous menu
- d. Use **CTRL+A** to go back to the last action

4.2 Remote Network Management

IP Setting

It must assign an IP for the IP DSLAM via the console port (RS-232 Port) before users configure the VDSL IP DSLAM via **Telnet** and **Web**. Or users can modify the PC/Laptop's IP domain same as the VDSL IP DSLAM and use the manufacturer default IP to configure the VDSL IP DSLAM.

1. Remote control by “Telnet”

To enter Telnet, type the IP address of the VDSL switch to connect management system. And type User name and password.

Default User Name: admin

Default Password: 123

Note:

2. For the security reason, the device limits the numbers of user login via Telnet and Console port. User can't login the device via Telnet and Console port at the same time.

User must log-out to leave after finish configures the device via Console port, or the user can't login via Telnet.

3. WEB management doesn't limit the numbers of user login.

2. Network control by “WEB”

The 24 ports VDSL IP DSLAM provides WEB UI to manage the device. The default configurations are as follows:

Default IP Address: 192.168.16.250

Subnet Mask: 255.255.255.0

Default Gateway: 192.168.16.1

User Name: admin

Password: 123

User can modify the IP Configuration instead of the manufacturer default settings via Console port before login the IP DSLAM via WEB UI. User can use the Default IP Address or User's defining IP Address get into the Web UI, and it will ask for user name and password as above.



4.3 Web Basic Management

4.3.1 Port Status

This page can see every port status that depended on user setting and the negotiation result.

1. **State:** Display port statuses disable or enable. "Unlink" will be treated as "off".
2. **Link:** Down is "No Link", UP is "Link".
3. **SNR:** (Sign to Noise Ratio) The SNR can use as an indication of the quality of the Link. If SNR Value>25, it means connection in Good Link status.
4. **Speed:** Port 1-24 are 5/15/25Mbps VDSL, Port 25-26 are 10/100/1000Mbps.
5. **Duplex:** Display full-duplex or half-duplex mode.
6. **Flow Control: Full:** Display the flow control status is "enable" or "disable" in full mode.
Half: Display the backpressure is "enable" or "disable" in half mode
7. **Rate Control:** Display the rate control setting.
Ingr: Display the Port effective ingress rate of user setting.
Egr: Display the Port effective egress rate of user setting.

Port Status

The following information provides a view of the current status of the unit.

Port		State		Link	SNR(db)		Speed		Duplex		Flow Control			Rate Control(100K)		Priority	Users Limit
Id	Location	Config	State		UP	Down	Config	State	Config	State	Config		State	State			
				Full							Half	Ingr		Egr			
1	0	On	On	Up	44	44	15M	15M	Full	Full	On	On	On	Off	Off	Disable	Disable
2	0	On	On	Up	44	44	15M	15M	Full	Full	On	On	On	Off	Off	Disable	Disable
3	0	On	On	Up	44	44	15M	15M	Full	Full	On	On	On	Off	Off	Disable	Disable

4.3.2 Port Statistics

The following information provides a view of the current status of the unit.

Press “Reset” button to clean all counts.

Port Statistics

The following information provides a view of the current status of the unit.

Port	Location	State	Link	TxGoodPkt	TxBadPkt	RxGoodPkt	RxBadPkt	TxAbort	Collision	DropPkt
1	0	On	Up	1495	0	0	0	0	0	0
2	0	On	Up	1495	0	0	0	0	0	0
3	0	On	Up	1495	0	0	0	0	0	0
4	0	On	Up	1486	0	0	0	0	0	0
5	0	On	Up	1495	0	0	0	0	0	0
6	0	On	Up	1495	0	0	0	0	0	0
7	0	On	Up	1495	0	0	0	0	0	0
8	0	On	Up	1495	0	0	0	0	0	0
9	0	On	Up	1470	0	0	0	0	0	0
10	0	On	Up	1495	0	0	0	0	0	0
11	0	On	Up	1495	0	0	0	0	0	0
12	0	On	Up	1495	0	0	0	0	0	0
13	0	On	Up	1495	0	0	0	0	0	0
14	0	On	Up	1495	0	0	0	0	0	0
15	0	On	Up	1495	0	0	0	0	0	0
16	0	On	Up	1495	0	0	0	0	0	0
17	0	On	Up	1495	0	0	0	0	0	0

Reset

4.3.3 TFTP Update

The following menu functions allow user update the firmware and remote boot device:

1. Install TFTP Turbo98 and execution.
2. Copy firmware update version image.bin to TFTP Turbo98 directory.
3. In web management select administrator—TFTP update firmware.
4. Download new image.bin file then in web management press <update firmware>.
5. After update finished, press <reboot> to restart switch.

TFTP Download New Image

TFTP Server IP Address	<input type="text" value="192.168.16.9"/>
Firmware File Name	<input type="text" value="image.bin"/>

4.3.4 TFTP Backup

TFTP Restore Configuration

Use this function to set TFTP server address. User can restore EEPROM value from here, but before the IP DSLAM restore the flash image file, the image file must store in TFTP server.

TFTP Configuration

TFTP Restore Configuration		TFTP Backup Configuration	
TFTP Server IP Address	192.168.16.9		
Restore File Name	data.dat		

TFTP Backup Configuration

Use this function to set TFTP server IP address. User can save current EEPROM value from here, then go to the TFTP restore configuration page to restore the EEPROM value.

TFTP Configuration

TFTP Restore Configuration		TFTP Backup Configuration	
TFTP Server IP Address	192.168.16.9		
Backup File Name	data.dat		

4.4 Web Administrator Management

4.4.1 IP Address

1. User can configure the IP Settings and fill the new values in here.

Set IP Addresses

DHCP : ▾

IP Address	<input type="text" value="192.168.16.230"/>
Subnet_Mask	<input type="text" value="255.255.255.0"/>
Gateway	<input type="text" value="192.168.16.1"/>

4.4.2 Switch Settings

Basic

Description: Display the name of device type.

MAC Address: The unique hardware address assigned by manufacturer (default)

Firmware Version: Display the device's Firmware version.

Hardware version: Display the device's Hardware version.

Default config value version: Display write to default EEPROM value table version.

Switch Settings

Basic	GIGA Ports Info	Advanced
Description	24+2G Concentrator/Switch	
MAC Address	00056e0200f5	
Firmware version	B.1	
PCB version	C.3	
Default config value version	A.1	

GIGA Ports Info

Display information of Giga Ports.

Switch Settings

Basic	GIGA Ports Info	Advanced									
	<table border="1"><thead><tr><th></th><th>TYPE</th><th>DESCRIPTION</th></tr></thead><tbody><tr><td>Port 25</td><td>1000TX</td><td>RJ-45</td></tr><tr><td>Port 26</td><td>1000TX</td><td>RJ-45</td></tr></tbody></table>		TYPE	DESCRIPTION	Port 25	1000TX	RJ-45	Port 26	1000TX	RJ-45	
	TYPE	DESCRIPTION									
Port 25	1000TX	RJ-45									
Port 26	1000TX	RJ-45									

Advanced

Miscellaneous Settings

Mac Address Age-out Time: Setting the time for inactive MAC address remains in the Switch's address table.

Max bridge transit delay bound control: Limit the packets queuing time in IP DSLAM. If this function is enable, the packets queued exceed will be dropped.

Broadcast Storm Filter: To configure broadcast storm control, enable it and set the upper threshold for individual ports. The threshold is the percentage of the port's total bandwidth used by broadcast traffic. When broadcast traffic for a port rises above the threshold you set, broadcast storm control becomes active.

Switch Settings



Enter the settings, then click Submit to apply the changes on this page.

MAC Table Address Entry
Age-Out Time: seconds (120~765, must multiple of 3)

Max bridge transmit delay bound control: ▼

Enable Low Queue Delay Bound ----- Max Delay Time: (1~255, 2ms/unit)

Broadcast Storm Filter Mode: ▼

Priority Queue Service settings

First Come First Service: The sequence of packets sent is depend on arrive order.

All High before Low: The high priority packets sent before low priority packets.

WRR: Weighted Round Robin. Select the preference given to packets in the switch's high-priority queue.

These options represent the number of high priority packets sent before one low priority packet is sent. For example, 5 High: 2 Low means that the switch sends 5 high priority packets before sending 2 low priority packets.

QoS Policy: High Priority Levels: 0~7 priority level can map to high or low queue.

Priority Queue Service:

802.1p Priority

First Come First Service

All High before Low

WRR ----- High weight: Low weight:

Qos Policy: High Priority Levels

Level0 Level1 Level2 Level3 Level4 Level5 Level6 Level7

Collisions Retry Forever: Enable or Disable Collisions Retry Forever.

Hash Algorithm: Select in CRC-Hash mode or DirectMap mode

802.1x Protocol: Enable or disable 802.1x Protocol.

4.4.3 Port Location

This page allows for the identification of the location of each Remote Modem. In the text box next to a port, type the location of the Remote Modem for that port. The field is limited to alphanumeric characters and hyphen, and will accept a maximum 10 characters.

Port Location

This page allows for the identification of the location of each Remote Modem. In the text box next to a port, type the location of the Remote Modem for that port. The field is limited to alphanumeric characters and hyphen, and will accept a maximum 10 characters.

Port 1 Location :	0 <input type="text"/>	Port 2 Location :	0 <input type="text"/>
Port 3 Location :	0 <input type="text"/>	Port 4 Location :	0 <input type="text"/>
Port 5 Location :	0 <input type="text"/>	Port 6 Location :	0 <input type="text"/>
Port 7 Location :	0 <input type="text"/>	Port 8 Location :	0 <input type="text"/>
Port 9 Location :	0 <input type="text"/>	Port 10 Location :	0 <input type="text"/>
Port 11 Location :	0 <input type="text"/>	Port 12 Location :	0 <input type="text"/>
Port 13 Location :	0 <input type="text"/>	Port 14 Location :	0 <input type="text"/>
Port 15 Location :	0 <input type="text"/>	Port 16 Location :	0 <input type="text"/>
Port 17 Location :	0 <input type="text"/>	Port 18 Location :	0 <input type="text"/>
Port 19 Location :	0 <input type="text"/>	Port 20 Location :	0 <input type="text"/>
Port 21 Location :	0 <input type="text"/>	Port 22 Location :	0 <input type="text"/>
Port 23 Location :	0 <input type="text"/>	Port 24 Location :	0 <input type="text"/>

4.4.4 Port Controls

This section shows you how to change every port status and speed mode.

- 1. State:** User can disable or enable this port control.
- 2. Negotiation:** User can set auto negotiation mode is Auto, Force of per port, Nway (specify the speed/duplex on this port and enable auto-negotiation).
- 3. Speed:** User can set 5Mbps / 10Mbps / 15Mbps for port 1 ~ 24.
1000Mbps, 100Mbps or 10Mbps speed for Port25 ~ Port26.
- 4. Duplex:** User can set full-duplex or half-duplex mode of per port.
- 5. Flows control: Full:** User can set flow control function is enable or disable in full mode.
Half: User can set backpressure is enable or disable in half mode.
- 6. Rate Control:** 24 ports VDSL IP DSLAM, port 1 ~ port 24, supports by-port ingress and egress rate control. For example, assume Port 1 is 10Mbps, users can set it's effective egress rate is 1Mbps, ingress rate is 500Kbps. IP DSLAM will be performed flow control or backpressure to confine the ingress rate to meet the specified rate.
Ingress: The valid range is 0 ~ 100 (100 = 10Mbps). The unit is 100K. 0: disable rate control.
Egress: The valid range is 0 ~ 100 (100 = 10Mbps). The unit is 100K. 0: disable rate control.

Port Controls

Port	State	Negotiation	Speed	Duplex	Flow Control		Rate Control (100K)		Priority	Users Limit
					Full	Half	Ingress	Egress		
PORT1 ▲ PORT2 ☰ PORT3 PORT4 ▼	Enable ▼	Auto ▼	100 ▼	Full ▼	Enable ▼	Enable ▼	0	0	Disable ▼	off ▼

4.4.5 Trunking

The Link Aggregation Control Protocol (LACP) provides a standardized means for exchanging information between Partner Systems on a link to allow their Link Aggregation Control instances to reach agreement on the identity of the Link Aggregation Group to which the link belongs, move the link to that Link Aggregation Group, and enable its transmission and reception functions in an orderly manner. In conclusion, Link aggregation lets you group up to eight consecutive ports into a single dedicated connection. This feature can expand bandwidth to a device on the network. LACP operation requires full-duplex mode, more detail information refers to IEEE802.3ad.

Trunking

Aggregator Setting	Aggregator information	State Activity
System Priority		
1		
Group ID	Group1 ▾	<< Get
Lacp	Disable ▾	
Work Ports	0	
	<< Add << Remove>>	PORT1 ▲ PORT2 PORT3 PORT4 PORT5 PORT6 PORT7 PORT8 PORT9 ▼

Aggregator setting

System Priority: A value used to identify the active LACP. The switch with the lowest value has the highest priority and is selected as the active LACP.

- 1. Group ID:** There are seven trunk groups to provide configure. Choose the "group id" and click "Get".
- 2. LACP:** If enable, the group is LACP static trunking group. If disable, the group is local static trunking group. All ports support LACP dynamic trunking group. If connecting to the device that also supports LACP, the LACP dynamic trunking group will be created automatically.
- 3. Work ports:** Allow max four ports can be aggregated at the same time. If LACP static trunking group, the exceed ports is standby and able to aggregate if work ports fail. If local static trunking group, the number must be as same as the group member ports.
- 4.** Select the ports to join the trunking group. Allow max four ports can be aggregated at the same time.
- 5.** If LACP enable, you can configure LACP Active/Passive status in each ports on State Activity page.
- 6.** Click Apply.

Aggregator Information

When you are setting LACP aggregator, you can see relation information in here.

1. This page is no group active. LACP don't working.

Trunking

<u>Aggregator Setting</u>	<u>Aggregator information</u>	<u>State Activity</u>
----------------------------------	--------------------------------------	------------------------------

The following information provides a view of LACP current status.

NO GROUP ACTIVE

2. This page is Static Trunking group.

<u>Aggregator Setting</u>	<u>Aggregator information</u>	<u>State Activity</u>
----------------------------------	--------------------------------------	------------------------------

The following information provides a view of LACP current status.

Static Trunking Group	
Group Key	1
Port_No	1 2 3 4

Static Trunking Group	
Group Key	2
Port_No	5 6 7 8

State Activity

Active (select): The port automatically sends LACP protocol packets.

Passive (no select): The port does not automatically sends LACP protocol packets, and responds only if it receives LACP protocol packets from the opposite device.

1. A link having either two active LACP ports or one active port can perform dynamic LACP trunking. A link has two passive LACP ports will not perform dynamic LACP trunking because both ports are waiting for and LACP protocol packet from the opposite device.
2. If you are active LACP's actor, when you are select trunking port, the active status will be created automatically.


Aggregatort Setting Aggregatort information State Activity

Port	LACP State Activity	Port	LACP State Activity
1	N/A	2	N/A
3	N/A	4	N/A
5	N/A	6	N/A
7	N/A	8	N/A
9	N/A	10	N/A
11	N/A	12	N/A
13	N/A	14	N/A
15	N/A	16	N/A
17	N/A	18	N/A
19	N/A	20	N/A
21	N/A	22	N/A
23	N/A	24	N/A

4.4.6 Filter Database

IGMP Snooping

Forwarding and Filtering

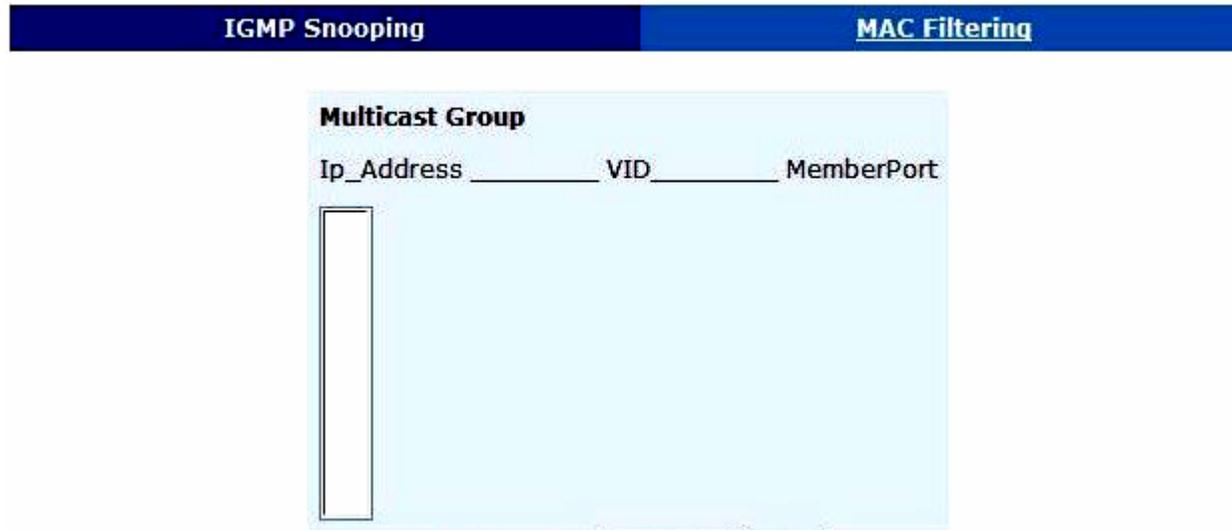

The 24 ports VDSL IP DSLAM supports IP multicast, you can enable IGMP protocol on web management's switch setting advanced page, then display the IGMP snooping information in this page, you can view difference multicast group, VID and member port in here, IP multicast addresses range from 224.0.0.0 through 239.255.255.255.

The Internet Group Management Protocol (IGMP) is an internal protocol of the Internet Protocol (IP) suite.

Intelligent 4 Band VDSL 24 Ports Managed IP DSLAM USER'S MANUAL Ver. A.1

IP manages multicast traffic by using switches, routers, and hosts that support IGMP. Enabling IGMP allows the ports to detect IGMP queries and report packets and manage IP multicast traffic through the switch. IGMP have three fundamental types of message as follows:

Message	Description
Query	A message sent from the carrier (IGMP router or switch) asking for a response from each host belonging to the multicast group.
Report	A message sent by a host to the carrier to indicate that the host wants to be or is a member of a given group indicated in the report message.
Leave Group	A message sent by a host to the carrier to indicate that the host has quit to be a member of a specific multicast group.

MAC filtering

MAC address filtering allows the switch to drop unwanted traffic. Traffic is filtered based on the destination addresses.

Forwarding and Filtering

The screenshot shows a web interface for configuring MAC filtering. At the top, there is a navigation bar with two tabs: "IGMP Snooping" and "MAC Filtering". The "MAC Filtering" tab is selected. Below the navigation bar, the text "Specify a MAC address to filter." is displayed. The main content area contains a form with two input fields. The first field is labeled "Mac Address" and is currently empty. The second field is labeled "Vlan ID" and contains the text "N/A".

1. In the MAC Address box, enter the MAC address that wants to filter.
2. If tag-based (802.1Q) VLAN are set up on the switch, in the VLAN ID box, type the VID to associate with the MAC address.
3. Click the Add.
4. Choose the MAC address that you want to delete and then click the Delete.


4.4.7 Vlan Config

A Virtual LAN (VLAN) is a logical network grouping that limits the broadcast domain. It allows you to isolate network traffic so only members of the VLAN receive traffic from the same VLAN members.

Basically, creating a VLAN from a switch is logically equivalent of reconnecting a group of network devices to another Layer 2 switch. However, all the network devices are still plug into the same switch physically.

The VDSL IP DSLAM support port-based VLAN and 802.1Q (tagged-based) VLAN in web management page.

Vlan Configuration

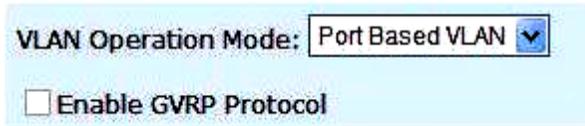

VLAN Operation Mode: Port Based VLAN ▼


Enable GVRP Protocol

NOTE:

The device may need 50 seconds for changing VLAN Operation Mode from No VLAN to 802.1Q. It is necessary to reboot the IP DSLAM for valid value after the VLAN mode changed every time.

Port-based VLAN

Packets can go among only members of the same VLAN group. Note all unselected ports are treated as belonging to another single VLAN. If the port-based VLAN enabled, the VLAN-tagging is ignored.

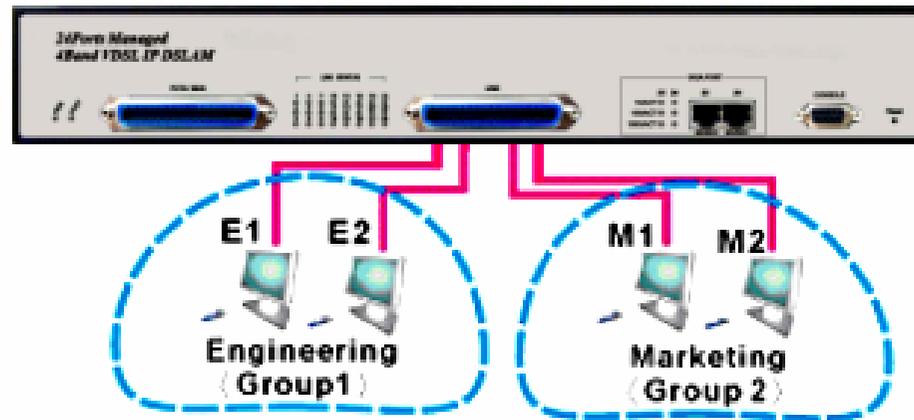

Vlan Configuration

VLAN Operation Mode: Port Based VLAN

Enable GVRP Protocol

VLAN Information

test_1

Add Edit Delete PrePage NextPage Help


1. Click Add to create a new VLAN group.
2. Enter the VLAN name, group ID and select the members for the new VLAN, then click Apply.
3. If the VLAN groups over the page's limitation, user can use "Next Page" to view other VLAN groups.

NOTE: If the trunk groups exist, it (ex: TRK1, TRK2...) will show in select menu of ports, and user can set it in the member of the VLAN or not.

Tag-based VLAN (IEEE 802.1Q VLAN)

Tagged-based VLAN is an IEEE 802.1Q specification standard. Therefore, it is possible to create a VLAN across devices from different switch vendors. IEEE 802.1Q VLAN uses a technique to insert a “tag” into the Ethernet frames. Tag contains a VLAN Identifier (VID) that indicates the VLAN numbers.

In order to an end station to send packets to different VLANs, it itself has to be either capable of tagging packets it sends with VLAN tags or attached to a VLAN-aware bridge that is capable of classifying and tagging the packet with different VLAN ID based on not only default PVID but also other information about the packet, such as the protocol.

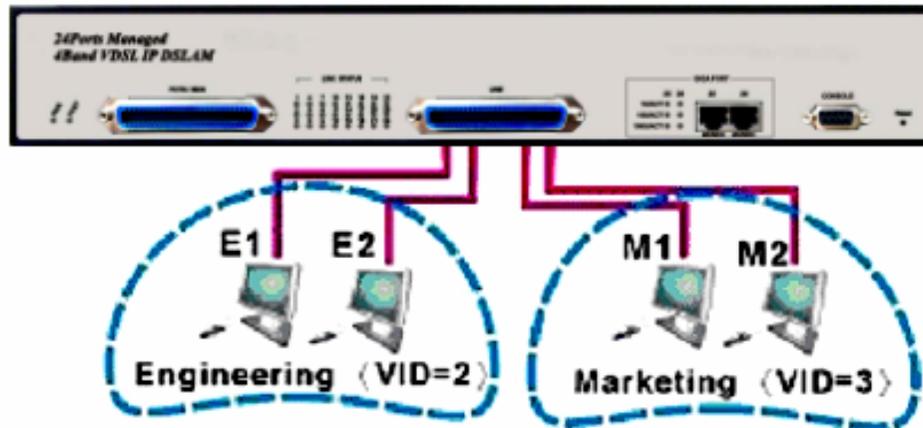

802.1Q VLAN

This page, user can create Tag-based VLAN, and enable or disable GVRP protocol.

There are 256 VLAN groups to provide configure. Enable 802.1Q VLAN, the all ports on the switch belong to default VLAN, VID is 1. The default VLAN can't be deleted.

Vlan Configuration

VLAN Operation Mode: 802.1Q

Enable GVRP Protocol

Basic Port VID

VLAN Information

DEFAULT_1

Add Edit Delete PrePage NextPage Help

GVRP (GARP [Generic Attribute Registration Protocol] VLAN Registration Protocol)

GVRP allows automatic VLAN configuration between the switch and nodes. If the 24 ports VDSL IP DSLAM is connected to a device with GVRP enabled, you can send a GVRP request using the VID of a VLAN defined on the 24 ports VDSL IP DSLAM, the 24 ports VDSL IP DSLAM will automatically add that device to the existing VLAN.

Port VID (PVID)

Set the port VLAN ID that will be assigned to untagged traffic on a given port. This feature is useful for accommodating devices that you want to participate in the VLAN but that don't support tagging. VDSL SWITCH each port allows user to set one PVID, the range is 1~4094, default PVID is 1. The PVID must as same as the VLAN ID that the port belong to VLAN group, or the untagged traffic will be dropped.

Basic		Port VID	
Assign a Port VLAN ID (1~4094) for untagged traffic on each port, then click Submit to apply the changes on this page.			
Ingress Filtering Rule 1 (Forward only packets with VID matching this port's configured VID) Ingress Filtering Rule 2 (Drop Untagged Frame)			
NO	PVID	Ingress Filtering 1	Ingress Filtering 2
PORT1 ▲ PORT2 ▲ PORT3 ▼	1	Enable ▼	Disable ▼

The 24-ports VDSL IP DSLAM has 16 PVID ranges. PVID of Port 1 ~ Port 26 must be in the same range.

Num.	PVID Range						
1	1~255	5	1024~1279	9	2048~2303	13	3072~3327
2	256~511	6	1280~1535	10	2304~2559	14	3328~3583
3	512~767	7	1536~1791	11	2560~2815	15	3584~3839
4	768~1023	8	1792~2047	12	2816~3071	16	3840~4094

Ingress Filtering

Ingress filtering lets frames belonging to a specific VLAN to be forwarded if the port belongs to that VLAN.

VDSL IP DSLAM has two ingress filtering rule as follows:

Ingress Filtering Rule 1: Forward only packets with VID matching this port's configured VID.

Ingress Filtering Rule 2: Drop Untagged Frame.

4.4.8 Spanning Tree

The Spanning-Tree Protocol (STP) is a standardized method (IEEE 802.1D) for avoiding loops in switched networks. When STP enabled, to ensure that only one path at a time is active between any two nodes on the network.

You can enable Spanning-Tree Protocol on web management's switch setting advanced item, select enable Spanning-Tree protocol. We are recommended that you enable STP on all 24 ports VDSL IP DSLAM to ensure a single active path on the network.

You can view spanning tree information about the Root Bridge.

Root Bridge Information

Priority	32768
Mac Address	00056e002185
Root Path Cost	14
Root Port	PORT25
Max Age	20
Hello Time	2
Forward Delay	15

You can view spanning tree status about the switch as the following screen.

STP Port Status

PortNum	PathCost	Priority	PortState
PORT1	10	128	FORWARDING
PORT2	10	128	FORWARDING
PORT3	10	128	FORWARDING
PORT4	10	128	FORWARDING
PORT5	10	128	FORWARDING
PORT6	10	128	FORWARDING
PORT7	10	128	FORWARDING

You can set new value for STP parameter

Configure Spanning Tree Parameters

STP State	<input checked="" type="checkbox"/>
Priority (0-65535)	32768
Max Age (6-40)	20
Hello Time (1-10)	2
Forward_Delay_Time(4-30)	15

Parameter	Description
Priority	You can change priority value, A value used to identify the root bridge. The bridge with the lowest value has the highest priority and is selected as the root. Enter a number 1 through 65535.
Max Age	You can change Max Age value, The number of seconds a bridge waits without receiving Spanning-Tree Protocol configuration messages before attempting a reconfiguration. Enter a number 6 through 40.
Hello Time	You can change Hello time value, the number of seconds between the transmissions of Spanning-Tree Protocol configuration messages. Enter a number 1 through 10.
Forward Delay time	You can change forward delay time, The number of seconds a port waits before changing from its Spanning-Tree Protocol learning and listening states to the forwarding state. Enter a number 4 through 30.

The following parameter can be configured on each port

Configure Spanning Tree Port Parameters

Port Number	Path Cost (1 - 65535; Default 10)	Priority (0 - 255; Default 128)
<div style="border: 1px solid black; padding: 2px;"> PORT1 ▲ PORT2 □ PORT3 □ PORT4 □ PORT5 ▼ </div>	<input type="text" value="10"/>	<input type="text" value="128"/>

Parameter	Description
Port Priority	Define the priority of each port, the range is from 0 to 255, the lower number has the higher priority. Default Value is 128.
Path Cost	Specifies the Path Cost of the port that switch uses to determine which port are the forwarding ports the lowest number is forwarding ports, the range is from 1 to 65535 and default value base on IEEE802.1D 10Mb/s = 50-600 100Mb/s = 10-60 1000Mb/s = 3-10

4.4.9 Port Sniffer

The Port Sniffer is a method for monitor traffic in switched networks. Traffic through ports can be monitored by one specific port. That is, traffic goes in or out monitored ports will be duplicated into sniffer port.

1. **Sniffer Mode:** Press Space key to set sniffer mode: Disable\Rx\Tx\Both.
2. **Monitoring Port:** It means sniffer port can be used to see all monitor port traffic. You can connect sniffer port to LAN analysier or netxray.
3. **Monitored Port:** The ports you want to monitor. All monitor port traffic will be copied to sniffer port. You can select max 25 monitoring ports in the switch. User can choose which port wants to monitored in only one sniffer mode.

If you want to disable the function, you must select monitor port to none.

Port Sniffer

Roing Analysis State:	DISABLE ▾
Analysis Port:	None ▾
Port	Monitor
PORT1	<input type="checkbox"/>
PORT2	<input type="checkbox"/>
PORT3	<input type="checkbox"/>
PORT4	<input type="checkbox"/>
PORT5	<input type="checkbox"/>
PORT6	<input type="checkbox"/>
PORT7	<input type="checkbox"/>
PORT8	<input type="checkbox"/>
PORT9	<input type="checkbox"/>
PORT10	<input type="checkbox"/>
PORT11	<input type="checkbox"/>
PORT12	<input type="checkbox"/>
PORT13	<input type="checkbox"/>
PORT14	<input type="checkbox"/>
PORT15	<input type="checkbox"/>
PORT16	<input type="checkbox"/>
PORT17	<input type="checkbox"/>
PORT18	<input type="checkbox"/>
PORT19	<input type="checkbox"/>
PORT20	<input type="checkbox"/>
PORT21	<input type="checkbox"/>
PORT22	<input type="checkbox"/>
PORT23	<input type="checkbox"/>
PORT24	<input type="checkbox"/>
PORT25	<input type="checkbox"/>
PORT26	<input type="checkbox"/>

Apply Default Help

4.4.10 Snmp

Any Network Management running the simple Network Management Protocol (SNMP) can manage the switch, provided the Management Information Base (MIB) is installed correctly on the management station. The SNMP is a Protocol that governs the transfer of information between management and agent.

1. Use this page to define management stations as trap managers and to enter SNMP community strings. User can also define a name, location, and contact person for the switch. Fill in the system options data, and then click Apply to update the changes on this page.

Name: Enter a name to be used for the switch.

Location: Enter the location of the switch.

Contact: Enter the name of a person or organization.

SNMP Management

System Options

Name :	<input type="text"/>
Location :	<input type="text"/>
Contact :	<input type="text"/>

Intelligent 4 Band VDSL 24 Ports Managed IP DSLAM USER'S MANUAL Ver. A.1

2. Community strings serve as passwords and can be entered as one of the following:

RO: Read only. Enables requests accompanied by this string to display MIB-object information.

RW: Read write. Enables requests accompanied by this string to display MIB-object information and to set MIB objects.

3. Trap Manager

A trap manager is a management station that receives traps, the system alerts generated by the switch. If no trap manager is defined, no traps are issued. Create a trap manager by entering the IP address of the station and a community string.

The image shows two configuration panels. The top panel, titled "Community Strings", has a "Current Strings" list on the left containing "public_RO" and "private_RW". To the right are "Add" and "Remove" buttons. The "New Community String" section includes a "String" input field and radio buttons for "RO" (selected) and "RW". The bottom panel, titled "Trap Managers", has a "Current Managers" list on the left containing "(none)". To the right are "Add" and "Remove" buttons. The "New Manager" section includes "IP Address" and "Community" input fields.

4.4.11 Security Manager

Using this page, user can change web management user name and password.

1. User name: Type the new user name.
2. Password: Type the new password.
3. Reconfirm password: Retype the new password.
4. Click Apply.

Security Manager

User Name:	<input type="text" value="admin"/>
Assign/Change password:	<input type="password" value="..."/>
Reconfirm pssword:	<input type="password" value="..."/>
	<input type="button" value="Apply"/>

4.4.12 802.1X Config

System Configuration

802.1x makes use of the physical access characteristics of IEEE802 LAN infrastructures in order to provide a means of authenticating and authorizing devices attached to a LAN port that has point-to-point connection characteristics, and of preventing access to that port in cases in which the authentication and authorization process fails.

To enable 802.1x, you still need to fill in the authentication server information:

- Radius Server IP Address: the IP address of the authentication server.
- Server Port: The UDP port number used by the authentication server to authenticate.
- Accounting Port: The UDP port number used by the authentication server to retrieve accounting information.
- Shared Key: A key shared between this switch and authentication server.
- NAS Identifier: A string used to identify this switch.

Per port Configuration

In this page, you can select the specific port and configure the authorization state.

Each port can select four kinds of authorization state:

- Fu: force the specific port to be unauthorized.
- Fa: force the specific port to be authorized.
- Au: the state of the specific port was determined by the outcome of the authentication.
- No: the specific port didn't support 802.1x function.

Misc Configuration

In this page, you can change the default configuration for the 802.1x standard:

- Quiet Period: used to define periods of time during which it will not attempt to acquire a supplicant (Default time is 60 seconds).
- Tx Period: used to determine when an EAPOL PDU is to be transmitted (Default value is 30 seconds).
- Supplicant Timeout: used to determine timeout conditions in the exchanges between the supplicant and authentication server (Default value is 30 seconds).
- Server Timeout: used to determine timeout conditions in the exchanges between the authenticator and authentication server (Default value is 30 seconds).
- ReAuthMax: used to determine the number of re-authentication attempts that are permitted before the specific port becomes unauthorized (Default value is 2 times).
- ReAuth Period: used to determine a nonzero number of seconds between periodic re-authentication of the supplications (Default value is 3600 seconds).

4.4.13 Modem Location

This function allows for the identification of the location of each Remote Modem. In the text box to a port, type the location of the Remote Modem for that port. The field is limited to alphanumeric characters and hyphen, and will accept a maximum 10 characters.

Port Location

This page allows for the identification of the location of each Remote Modem. In the text box next to a port, type the location of the Remote Modem for that port. The field is limited to alphanumeric characters and hyphen, and will accept a maximum 10 characters.

Port 1 Location :	<input type="text" value="0"/>	Port 2 Location :	<input type="text" value="0"/>
Port 3 Location :	<input type="text" value="0"/>	Port 4 Location :	<input type="text" value="0"/>
Port 5 Location :	<input type="text" value="0"/>	Port 6 Location :	<input type="text" value="0"/>
Port 7 Location :	<input type="text" value="0"/>	Port 8 Location :	<input type="text" value="0"/>
Port 9 Location :	<input type="text" value="0"/>	Port 10 Location :	<input type="text" value="0"/>
Port 11 Location :	<input type="text" value="0"/>	Port 12 Location :	<input type="text" value="0"/>
Port 13 Location :	<input type="text" value="0"/>	Port 14 Location :	<input type="text" value="0"/>
Port 15 Location :	<input type="text" value="0"/>	Port 16 Location :	<input type="text" value="0"/>
Port 17 Location :	<input type="text" value="0"/>	Port 18 Location :	<input type="text" value="0"/>
Port 19 Location :	<input type="text" value="0"/>	Port 20 Location :	<input type="text" value="0"/>
Port 21 Location :	<input type="text" value="0"/>	Port 22 Location :	<input type="text" value="0"/>
Port 23 Location :	<input type="text" value="0"/>	Port 24 Location :	<input type="text" value="0"/>

4.4.14 Reset System

Reset 24 ports VDSL IP DSLAM to default configuration.



4.4.15 Reboot

Reboot the 24 ports VDSL IP DSLAM in software reset.



5. Applications

The VDSL provides home network architecture. Transforming an apartment into a Multiple-Family Home network area, sharing a single internet account for multiple users with Router & Cable Modem, it can provide unlimited access time in the internet at a reasonable low price.

Bridging Functions

The 24 ports VDSL IP DSLAM provides full transparent bridging function. It automatically connects node addresses, that are later used to filter and forward all traffic based on the destination address. When traffic passes between devices attached to the shared collision domain, those packets are filtered from the IP DSLAM. But when traffic must be passed between unique segments (i.e., different ports of the IP DSLAM), a temporary link is set up between the IP DSLAM's ports in order to pass this traffic, 24 ports VDSL IP DSLAM (the high-speed VDSL fabric).

Transceiver function

The 24 ports VDSL IP DSLAM supports Ethernet to VDSL convert, It can be transmit or receive packet from Ethernet port to the RJ21 port. Or VDSL port to Ethernet port.

Flexible Configuration


The 24 ports VDSL IP DSLAM is not only designed to segment your network, but also to provide a wide range of options in the configuration of Home network connections. It can be used as a simple stand-alone IP DSLAM; or can be connected with another IP DSLAM, Cable modem, Router, XDSL, ISDN, gateway or other network interconnection devices in various configurations. Some of the common applications of the IP DSLAM are described in this chapter.

Intelligent 4 Band VDSL 24 Ports Managed IP DSLAM USER'S MANUAL Ver. A.1

Used as Apartment for Internet Access

The 24 ports VDSL IP DSLAM provides a high speed, 5/15/25Mbps transmission over existing home telephone wiring over a single Internet account to provide simultaneous independent Internet access to multiple users.

No matter ISDN Telephone system or POTS Telephone system you are. VDSL Technology let you can use telephone system and VDSL network system in the same time.

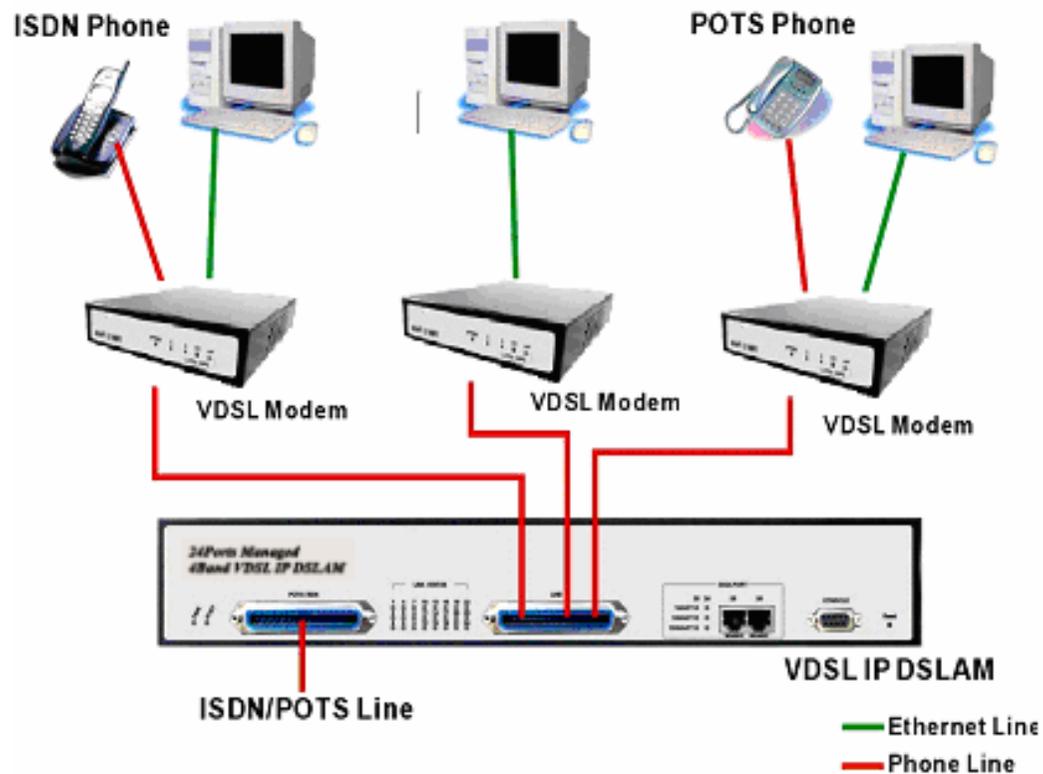

Application for sharing a single internet account

If multiple users would like to share a single internet account using the 24 ports VDSL IP DSLAM, which is to be connected to a IP sharing device, then to a xDSL or Cable Modem.

Note:

For network applications that actually require Router (e.g., Interconnecting dissimilar network types), attaching the IP DSLAM directly to a router can significantly improve overall home networking performance.

Appendix A: RJ-21 Telco ports distribution


RJ-21 Pin and VDSL port contrast list

VDSL 50 Pin RJ-21 Cable Connector List		
Cable Characteristic = 24 AWG twist wire		
1	24	& 49
2	23	& 48
3	22	& 47
4	21	& 46
5	20	& 45
6	19	& 44
7	18	& 43
8	17	& 42
9	16	& 41
10	15	& 40
11	14	& 39
12	13	& 38
13	12	& 37
14	11	& 36
15	10	& 35
16	9	& 34
17	8	& 33
18	7	& 32
19	6	& 31
20	5	& 30
21	4	& 29
22	3	& 28
23	2	& 27
24	1	& 26


Note: RJ-21 Pin25 & 50 are not used

Intelligent 4 Band VDSL 24 Ports Managed IP DSLAM USER'S MANUAL Ver. A.1

RJ-21 Cable Drawing (150 cm Male to Male)

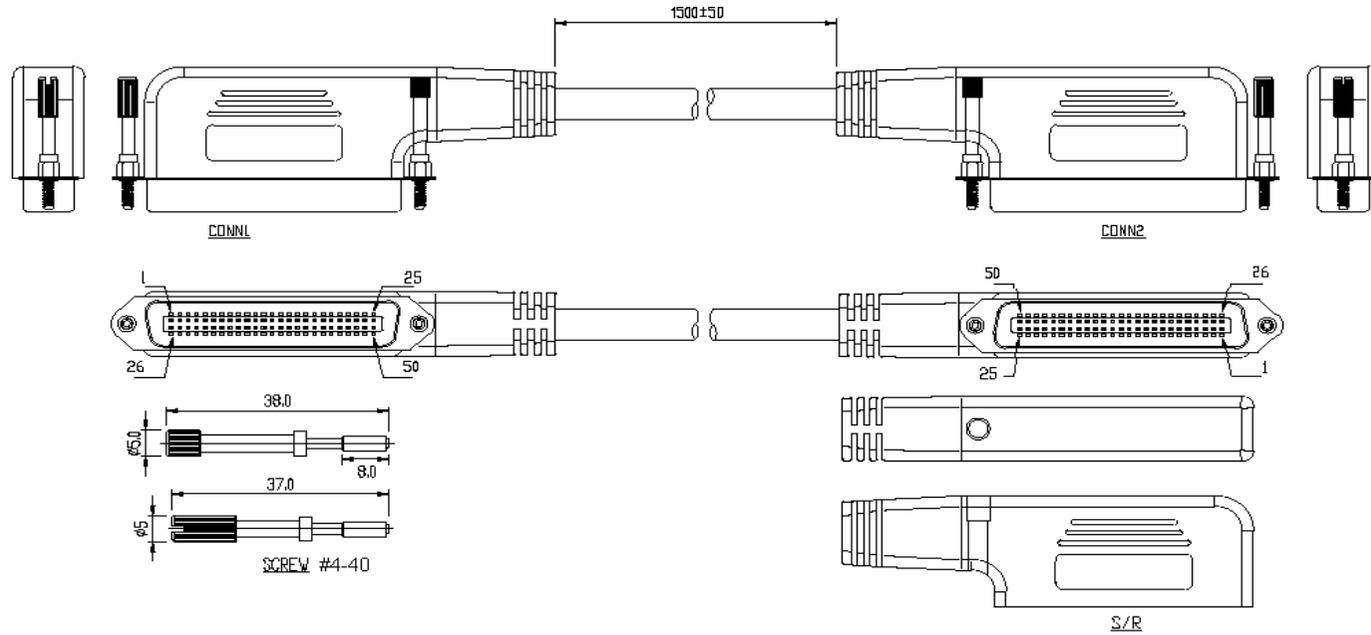

Appendix B: VDSL Spectrum

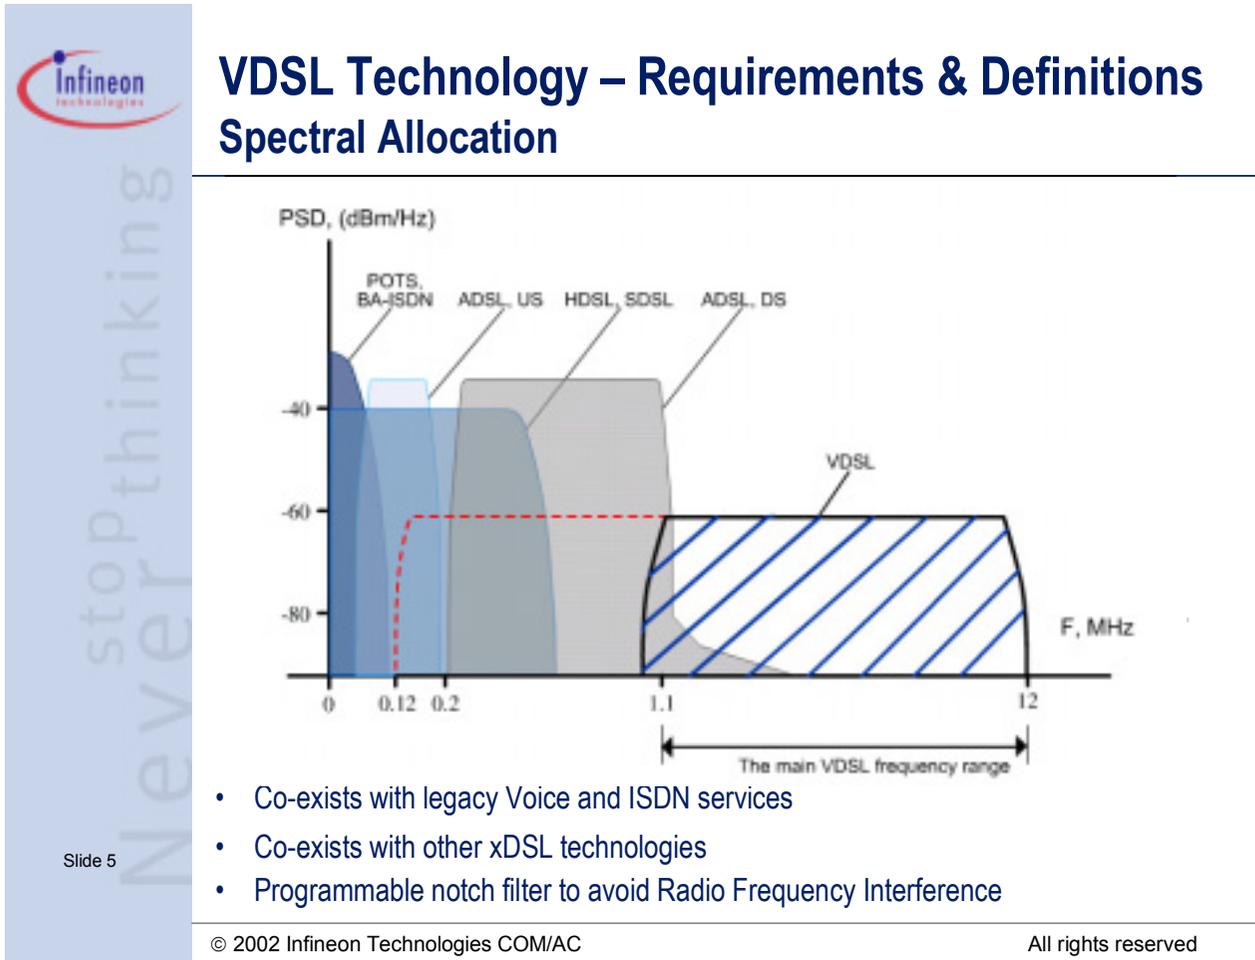

Slide 5

- Co-exists with legacy Voice and ISDN services
- Co-exists with other xDSL technologies
- Programmable notch filter to avoid Radio Frequency Interference

© 2002 Infineon Technologies COM/AC

All rights reserved

VDSL Spectral Allocation

Appendix C: Product Specification

Key Features & Benefits

- Supports bandwidth management (speed rate control) 5M/15M/25Mbps for VDSL port with long driver capable up to 1.7/1.1/0.6Km (5666/3666/1999 feet)
- Supports GARP/GVRP IEEE-802.1p/q tagging VLAN, IEEE 802.1v protocol VLAN, port base VLAN
- Supports quality of phone wiring detected with SNR (Signal to Noise Ratio) indications
- Supports QOS IEEE-802.1p
- Supports IGMP V2 Snooping
- Supports BOOTP/DHCP Client
- Supports Bandwidth Control
- Supports LACP IEEE-802.3ad Port Trunking
- Supports IEEE 802.1d Spanning Trees
- Supports Port Mirroring (Sniffer)
- Supports Broadcast Storm filtering
- Supports 802.1x Port Based Network Access Control
- Supports Web Base and Telnet for remote management
- Supports SNMP v1 RFC-1493 Bridge MIBs, RFC-1643 Ethernet MIB, RFC-1213 MIB II, Enterprise MIB
- Supports RMON groups 1, 2, 3, 9 (RFC-1757 RMON MIB)
- Supports TFTP/XMODEM for firmware upgrade
- Supports In-Band/Out-of-Band Management
- Supports RS-232 console port for functions setup (DB-9Pin Female / 9600bps)
- Spectral compatibility with XDSL, ISDN (2B1Q/4B3T), HomePNA

Product Specification

Standard:	IEEE802.3 standard IEEE802.3u standard IEEE802.3ab standard Compliant with ETSI, ITU, ANSI standards
Interface:	2 * RJ-45 10/100/1000Mbps Ethernet port 24 * RJ-21 connector for VDSL connection 24 * RJ-21 connector for POTS/ISDN connection
Flow control:	Full duplex: IEEE 802.3x Half duplex: Back pressure
MAC address table:	6K Entries
LED indication:	Power and POST Link/Active/Speed/Duplex Status for Ethernet port Link for VDSL port
VDSL Frequency Spectrum:	Transmitter: 900 KHz ~ 3.9MHz Receiver: 4MHz & 7.9MHz
POTS/ISDN pass filter Spectrum:	0 ~ 630Khz
Operating Temperature:	0°C ~ 50°C (41°F ~ 122°F)
Storage Temperature:	-20°C ~ 65°C (-4°F ~ 149°F)
Humidity:	10 to 90% (non-condensing)
Dimensions:	434 x 299 x 66 mm

Appendix D: Example of VLAN Setting

Example 1:

4 users join to Internet by VDSL system like following drawing, and have 7 demands.

User A connects to port 1 and join to Internet through port 26

User B connects to port 2 and join to Internet through port 26


User C connects to port 3 and join to Internet through port 26

User D connects to port 4 and join to Internet through port 26

User A isolate with Users B, C and D

User B isolate with Users A, C and D

User C and D in the same Group and isolate with Users A and B

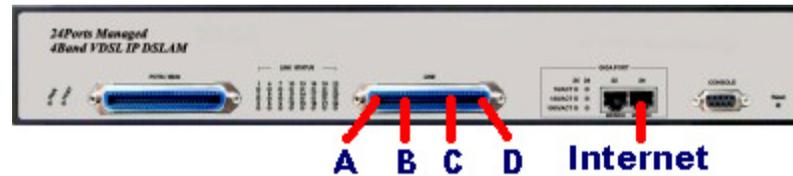

Setup Procedure:

Setup Port VID: Assign a Port VLAN ID (1~4094) for untagged traffic on each port like following: Port 1 PVID=21, Port 2 PVID=22, Port 3, 4 PVID=23

NO	PVID	Ingress Filtering 1	Ingress Filtering 2
PORT1	21	ENABLE	DISABLE
PORT2	22	ENABLE	DISABLE
PORT3	23	ENABLE	DISABLE
PORT4	24	ENABLE	DISABLE

Intelligent 4 Band VDSL 24 Ports Managed IP DSLAM USER'S MANUAL Ver. A.1

Add VLAN Group:

There are 256 VLAN groups available for configuration. Add a VLAN Group VID=21 member ports = port 1 & port 26

Note: Do not change the default_1 group.

Vlan Configuration

VLAN Operation Mode: 802.1Q
 Enable GVRP Protocol

Basic	Port VID
-------	----------

VLAN Information

DEFAULT__1

Add Edit Delete PrePage NextPage Help

Intelligent 4 Band VDSL 24 Ports Managed IP DSLAM USER'S MANUAL Ver. A.1

Setup VLAN Name=UserA, VID=21, select member ports 1 & 26

The screenshot shows a configuration interface with two tabs: 'Basic' and 'Port VID'. Under 'Port VID', there are three input fields: 'VLAN Name' with the value 'UserA', 'VID' with the value '21', and 'Protocol Vlan' with a dropdown menu set to 'NONE'. Below these fields are two vertical lists of ports. The left list contains PORT2 through PORT16. The right list contains PORT1 and PORT26. Between the lists are two buttons: 'Add >>' and '<< Remove'.

Select Untag or Tag Setup. Unless the device (computer or switch) which connect to port 1 or port 26 can support Tagging VLAN, otherwise select Untag.

VLAN Name:	UserA		
VLAN ID:	2		
Untag Member			
PORT1	Untag ▼	PORT26	Untag ▼

Add a VLAN Group Name=UserB, VID=22 member ports = port 2 & port 26

Add a VLAN Group Name=UserCD, VID=23 member ports = port 3, port 4 & port 26

Intelligent 4 Band VDSL 24 Ports Managed IP DSLAM USER'S MANUAL Ver. A.1

Example 2:

4 users join to Internet through 2 IP DSLAMs like the following drawing, and have 7 demands.

User A connect to port 1 of VDSL-1 and join to Internet through port 26 of VDSL-2

User B connect to port 2 of VDSL-1 and join to Internet through port 26 of VDSL-2


User C connect to port 1 of VDSL-2 and join to Internet through port 26 of VDSL-2

User D connect to port 2 of VDSL-2 and join to Internet through port 26 of VDSL-2

User A isolate with Users B, C and D

User C isolate with Users A, B and D

User B and D in the same Group and isolate with Users A and B

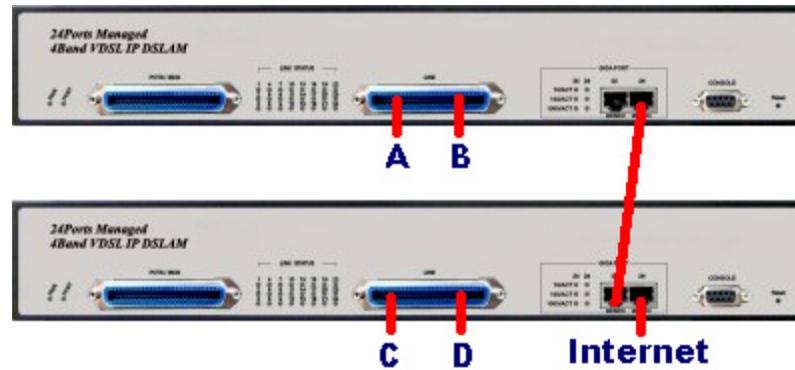

Setup Procedure:

VDSL-1 SETUP:

a. Setup Port VID: Port 1 PVID=11, Port 2 PVID=12

b. Add VLAN Group:

Note: Do not change the default_1 group.

Add a VLAN Group, Group name=UserA VID=11 member ports = port 1 & port 26

Select Untag or Tag Setup for VID=11 group:

Port Number	Untag/Tag Select
1	Untag
26	Tag

Add a VLAN Group, Group name=UserBD VID=12, member ports = port 2 & port 26

Select Untag or Tag Setup for VID=12 group:

Port Number	Untag/Tag Select
2	Untag
26	Tag

VDSL-2 SETUP:

a. Setup Port VID: Port 1 PVID=21, Port 2 PVID=12

b. Add VLAN Group:

Do not change the default_1 group.

Add a VLAN Group, Group name=UserA VID=11 member ports = port 25 & port 26

Select Untag or Tag Setup for VID=11 group:

Port Number	Untag/Tag Select
25	Tag
26	Untag

Add a VLAN Group, Group name=UserBD VID=12 member ports = port 2 & port 25 & port 26

Select Untag or Tag Setup for VID=12 group:

Port Number	Untag/Tag Select
2	Untag
25	Tag
26	Untag

Intelligent 4 Band VDSL 24 Ports Managed IP DSLAM USER'S MANUAL Ver. A.1

Add a VLAN Group, Group name=UserC VID=21 member ports = port 1 & port 26

Select Untag or Tag Setup for VID=21 group:

Port Number	Untag/Tag Select
1	Untag
26	Untag

Appendix E: Troubleshooting

Diagnosing VDSL Indicators

The VDSL can be easily monitored through its comprehensive panel indicators. These indicators assist the network manager in identifying problems of the IP DSLAM may encounter. This section describes common problems you may encounter and possible solutions.

- 1. Symptom:** POWER indicator does not light up (green) after power on.
Cause: Defective Power outlet, Power cord, Internal power supply
Solution: Check the power outlet by plugging in another that is functioning properly. Check the power cord with another device. If these measures fail to resolve the problem, have the unit power supply replaced by a qualified distributor.

- 2. Symptom:** Link indicator does not light up (green) after making a connection.
Cause: Network interface (ex. a network adapter card on the attached device), network cable, or switch port is defective.
Solution:
 - 2.1 Power off and re- power on the IP DSLAM.
 - 2.2 Verify that the switch and attached device are powered on.
 - 2.3 Be sure the cable is plugged into both the switch and corresponding device.
 - 2.4 Verify that the proper cable type is used and its length does not exceed specified limits.
 - 2.5 Check the adapter on the attached device and cable connections for possible defects.
 - 2.6 Replace the defective adapter or cable if necessary.

Intelligent 4 Band VDSL 24 Ports Managed IP DSLAM USER'S MANUAL Ver. A.1

3. Symptom: VDSL Link cannot be established

Cause: Rusted phone wire, not standard 24 gauge phone wire, not twisted-pair phone wire, wrong speed mode.

Solution: Check if speed of CO and CPE is in the same speed mode else please increase interleaver depth value to 8 or above.

Note: Phone cable must meet Cat. 3 standard or above and without clustering, otherwise will cause more cross talk issue to reduce DSL power driver.

System Diagnostics

Power and Cooling Problems

If the POWER indicator does not turn on when the power cord is plugged in, you may have a problem with the power outlet, power cord, or internal power supply as explained in the previous section. However, if the unit power is off after running for a while, check for loose power connections, power losses or surges at the power outlet, and verify that the fan on back of the unit is unobstructed and running prior to shutdown. If you still cannot isolate the problem, then the internal power supply may be defective. In this case, please contact your local dealer.

Installation

Verify that all system components have been properly installed. If one or more components appear to be malfunctioning (e.g., the power cord or network cabling), test them in an alternate environment where you are sure that all the other components are functioning properly.

Transmission Mode

The selections of the transmission mode for the RJ-45 ports are auto-negotiation using the default method. Therefore, if the Link signal is disrupted (e.g., by unplugging the network cable and plugging it back in again, or by resetting the power), the port will try to re-establish communications with the attached device(auto-negotiation). If auto-negotiation fails, then communications are set to half duplex by default. Based on this type of industry-standard connection policy, if you are using a full-duplex device that does not support auto-negotiation, communications can be easily lost (i.e., reset to the wrong mode) whenever the attached device is reset or experiences a power fluctuation. The best way to resolve this problem is to upgrade these devices to version that will support auto-negotiation.

Cabling

1. Verify that the cable type is correct. Be sure RJ-45 cable connectors are securely seated in the required ports. Use 100 Ω straight-through cables for all standard connections. Use Category 5 cable for 100/1000Mbps Fast Ethernet connections, or Category 3, 4 or 5 cables for standard 10Mbps Ethernet connections. Be sure RJ21 phone wiring, use 18~26 gauge.
2. Make sure all devices are connected to the network. Equipment any have been unintentionally disconnected from the network.
3. When cascading two devices using RJ-45 station ports at both ends of the cable (24 ports VDSL IP DSLAM) supports auto MDIX), without crossover cable can be used.

Physical Configuration

If problems occur after altering the network configuration, restore the original connections, and try to track the problem down by implementing the new changes, one step at a time. Ensure that cable distances and other physical aspects of the installation do not exceed recommendations.

System Integrity

As a last resort verify the switch integrity with a power-on reset. Turn the power to the switch off and then on several times. If the problem still persists and you have completed all the preceding diagnoses, then contact your dealer for assistance.

Appendix F: Compliance and Safety Information

FCC Radio Frequency Interference Statement

This equipment has been tested and found to comply with the limits for a computing device, pursuant to Part 15 of FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. The equipment and the receiver should be connected to outlets on separate circuits.
4. Consult the dealer or an experienced radio/television technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

If this telephone equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

Intelligent 4 Band VDSL 24 Ports Managed IP DSLAM USER'S MANUAL Ver. A.1

The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the proper functioning of your equipment. If they do, you will be notified in advance in order for you to make necessary modifications to maintain uninterrupted service.

This equipment may not be used on coin service provided by the telephone company. Connection to party lines is subject to state tariffs.

Important Safety Instructions

Caution: The direct plug-in wall transformer serves as the main disconnect for the product. The socket outlet shall be installed near the product and be readily accessible.

Caution: Use only the power supply included with this product. In the event the power supply is lost or damaged: In the United States, use only with CSA certified or UL listed Class 2 power supply, rated 5Vdc 1A or above. IN Europe, use only with CE certified power supply, rated 5Vdc 1A or above.

Do not use this equipment near water, for example in a wet basement. Avoid using a telephone during an electrical storm. There may be a remote risk of electrical shock from lightning.

Do not use the telephone to report a gas leak in the vicinity of the leak.

If trouble is experienced with this unit, please contact customer service at the address and phone listed below.

Do not disassemble this equipment. It does not contain any user serviceable components.

FCC Warning

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

CE Mark Warning


This is a CE class A product. In a domestic environment, this product may cause radio interference in which case the user may be required to take adequate measures.

Warranty

The original owner that the product delivered in this package will be free from defects in material and workmanship for one year parts after purchase.

There will be a minimal charge to replace consumable components, such as fuses, power transformers, and mechanical cooling devices. The warranty will not apply to any products which have been subjected to any misuse, neglect or accidental damage, or which contain defects which are in any way attributable to improper installation or to alteration or repairs made or performed by any person not under control of the original owner.

The above warranty is in lieu of any other warranty, whether express, implied, or statutory, including but not limited to any warranty of merchantability, fitness for a particular purpose, or any warranty arising out of any proposal, specification, or sample. Shall not be liable for incidental or consequential damages. We neither assume nor authorize any person to assume for it any other liability.

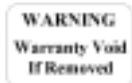

WARNING:
DO NOT TEAR OFF OR REMOVE THE WARRANTY STICKER AS SHOWN, OR THE WARRANTY IS VOID.