




Compact Video Splitters

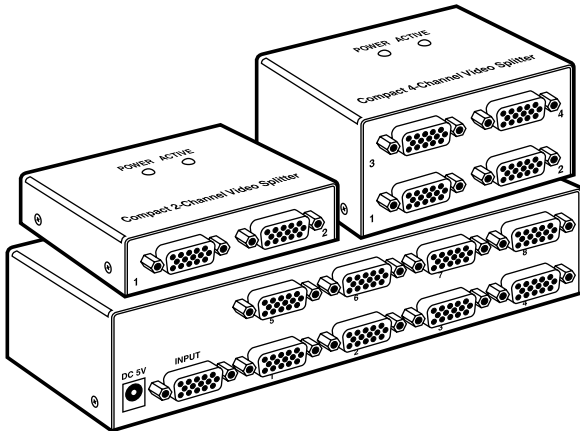

CUSTOMER SUPPORT INFORMATION

Order **toll-free** in the U.S.: Call **877-877-BBOX** (outside U.S. call **724-746-5500**)

FREE technical support 24 hours a day, 7 days a week: Call **724-746-5500** or fax **724-746-0746**

Mailing address: **Black Box Corporation**, 1000 Park Drive, Lawrence, PA 15055-1018

Web site: www.blackbox.com • E-mail: info@blackbox.com

**FEDERAL COMMUNICATIONS COMMISSION
AND
INDUSTRY CANADA
RADIO FREQUENCY INTERFERENCE STATEMENTS**

This equipment generates, uses, and can radiate radio-frequency energy, and if not installed and used properly, that is, in strict accordance with the manufacturer's instructions, may cause interference to radio communication. It has been tested and found to comply with the limits for a Class A computing device in accordance with the specifications in Subpart B of Part 15 of FCC rules, which are designed to provide reasonable protection against such interference when the equipment is operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference, in which case the user at his own expense will be required to take whatever measures may be necessary to correct the interference.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This digital apparatus does not exceed the Class A limits for radio noise emission from digital apparatus set out in the Radio Interference Regulation of Industry Canada.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de classe A prescrites dans le Règlement sur le brouillage radioélectrique publié par Industrie Canada.

NORMAS OFICIALES MEXICANAS (NOM) ELECTRICAL SAFETY STATEMENT

INSTRUCCIONES DE SEGURIDAD

1. Todas las instrucciones de seguridad y operación deberán ser leídas antes de que el aparato eléctrico sea operado.
2. Las instrucciones de seguridad y operación deberán ser guardadas para referencia futura.
3. Todas las advertencias en el aparato eléctrico y en sus instrucciones de operación deben ser respetadas.
4. Todas las instrucciones de operación y uso deben ser seguidas.
5. El aparato eléctrico no deberá ser usado cerca del agua—por ejemplo, cerca de la tina de baño, lavabo, sótano mojado o cerca de una alberca, etc..
6. El aparato eléctrico debe ser usado únicamente con carritos o pedestales que sean recomendados por el fabricante.
7. El aparato eléctrico debe ser montado a la pared o al techo sólo como sea recomendado por el fabricante.
8. Servicio—El usuario no debe intentar dar servicio al equipo eléctrico más allá a lo descrito en las instrucciones de operación. Todo otro servicio deberá ser referido a personal de servicio calificado.
9. El aparato eléctrico debe ser situado de tal manera que su posición no interfiera su uso. La colocación del aparato eléctrico sobre una cama, sofá, alfombra o superficie similar puede bloquea la ventilación, no se debe colocar en libreros o gabinetes que impidan el flujo de aire por los orificios de ventilación.

10. El equipo eléctrico deber ser situado fuera del alcance de fuentes de calor como radiadores, registros de calor, estufas u otros aparatos (incluyendo amplificadores) que producen calor.
11. El aparato eléctrico deberá ser connectado a una fuente de poder sólo del tipo descrito en el instructivo de operación, o como se indique en el aparato.
12. Precaución debe ser tomada de tal manera que la tierra fisica y la polarización del equipo no sea eliminada.
13. Los cables de la fuente de poder deben ser guiados de tal manera que no sean pisados ni pellizcados por objetos colocados sobre o contra ellos, poniendo particular atención a los contactos y receptáculos donde salen del aparato.
14. El equipo eléctrico debe ser limpiado únicamente de acuerdo a las recomendaciones del fabricante.
15. En caso de existir, una antena externa deberá ser localizada lejos de las líneas de energia.
16. El cable de corriente deberá ser desconectado del cuando el equipo no sea usado por un largo periodo de tiempo.
17. Cuidado debe ser tomado de tal manera que objetos liquidos no sean derramados sobre la cubierta u orificios de ventilación.
18. Servicio por personal calificado deberá ser provisto cuando:
 - A: El cable de poder o el contacto ha sido dañado; u
 - B: Objetos han caído o líquido ha sido derramado dentro del aparato; o
 - C: El aparato ha sido expuesto a la lluvia; o
 - D: El aparato parece no operar normalmente o muestra un cambio en su desempeño; o
 - E: El aparato ha sido tirado o su cubierta ha sido dañada.

TRADEMARKS USED IN THIS MANUAL

Any trademarks mentioned in this manual are acknowledged to be the property of the trademark owners.

Contents

Chapter	Page
1. Specifications	6
2. Overview	8
3. Installation	11
4. Operation	13
Appendix. Troubleshooting	14
A.1 Calling Black Box	14
A.2 Shipping and Packaging	15

1. Specifications

Number of VGA Outputs: AC1056-2: (2); AC1056-4: (4);
AC1056-8: (8)

Signal Bandwidth: AC1056-2, AC1056-4: 350 MHz;
AC1056-8: 300 MHz

Signal Type: VGA, SVGA, Multi-sync

Cable Length: AC1056-2: (1) 10-ft. (3-m) input cable,
(1) 10-ft. (3-m) output cable;
AC1056-4: (1) 10-ft. (3-m) input cable, (3) 10-ft. (3-m)
output cables;
AC1056-8: (1) 10-ft. (3-m) input cable, (7) 10-ft. (3-m)
output cables;
Or, you can use up to 210 ft. (64 m) maximum
cable length for user-supplied output cable

Connectors: AC1056-2: Input: (1) HD15 female,
Output: (2) HD15 female;
AC1056-4: Input: (1) HD15 female,
Output: (4) HD15 female;
AC1056-8: Input: (1) HD15 female,
Output: (8) HD15 female

Indicators: (2) LEDs: (1) Power, (1) Active

Power: Input: 100–240 VAC, 50/60 Hz autosensing inline power supply; Output: 5 VDC, 500 mA

Size: AC1056-2: 0.9"H x 3.3"W x 2.7"D

(2.3 x 8.4 x 6.9 cm);

AC1056-4: 1.6"H x 3.3"W x 2.7"D (4.1 x 8.4 x 6.9 cm);

AC1056-8: 4.2"H x 7.8"W x 3"D (10.7 x 19.8 x 7.6 cm)

Weight: AC1056-2: 0.4 lb. (0.2 kg);

AC1056-4: 0.6 lb. (0.3 kg);

AC1056-8: 1.3 lb. (0.6 kg)

2. Overview

The Compact Video Splitter (2-, 4-, or 8-port) broadcasts and boosts one VGA signal source to 2, 4, or 8 VGA monitors. Use it for presentations, exhibits, demonstrations, trade shows, monitor testing, or business meetings.

There's no software or interface card to install. Simply connect the cables, power on the splitter, and you're ready to transmit one VGA image to multiple monitors with excellent quality. A high-bandwidth circuit enables a high-resolution, 350-MHz VGA signal to display on 2 or 4 monitors, or a 300-MHz signal to display on 8 monitors.

The splitter's 2, 4, or 8 output connections attach to one input, one local output, and 1, 3, or 7 remote outputs. Cables for the input and remote outputs are included; you must supply the cable for the local output.

The maximum distance between the VGA input source and the output can be up to 210 feet (64 m). (For distances longer than 10 feet [3 m], you must supply the output cables.) The splitter works with VGA, SVGA, and multi-sync monitors to provide crisp, clear VGA images.

Cascade splitters for more VGA outputs. (Call Tech Support for details.) If the VGA input is lost, the splitter automatically saves power.

What's Included

Your package should contain the following items. If anything is missing or damaged, contact Black Box at 724-746-5500.

AC1056-2:

- (1) Compact Video Splitter, 2-Port
- (1) 10-ft. (3-m) input cable
- (1) 10-ft. (3-m) output cable
- This user's manual

AC1056-4:

- (1) Compact Video Splitter, 4-Port
- (1) 10-ft. (3-m) input cable
- (3) 10-ft. (3-m) output cables

COMPACT VIDEO SPLITTERS

- This user's manual

AC1056-8:

- (1) Compact Video Splitter, 8-Port
- (1) 10-ft. (3-m) input cable
- (7) 10-ft. (3-m) output cables
- This user's manual

3. Installation

1. For the 2-port model (AC1056-2), you'll need two HD15 male-to-male output cables (one of these cables is included) to connect each video splitter's output connector to each computer's VGA output connector. You'll also need one input cable (included).

For the 4-port model (AC1056-4), you'll need four output cables (three of these cables are included) and one input cable (included).

For the 8-port model (AC1056-8), you'll need eight output cables (seven of these cables are included) and one input cable (included).

Connect multiple monitors to the video splitter's output connectors as shown in Figure 3-1.

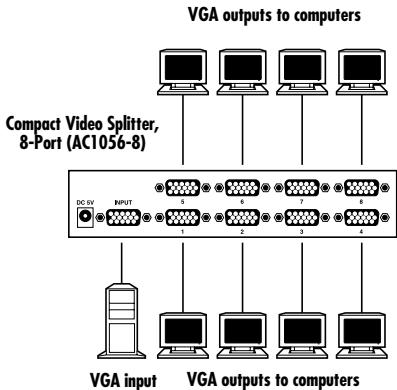


Figure 3-1. Compact Video Splitter, 8-Port (AC1056-8) connection.

2. You'll also need to connect the Compact Video Splitter's input connector to the VGA source. Use an HD15 male-to-male cable (included) for this connection.
3. Connect the included power supply cord's barrel connector to the barrel connector receptacle on the Compact Video Splitter. Then plug the other end of the power cord into an AC outlet.

4. Operation

Once the Compact Video Splitter is installed, it operates unattended. The splitter has two front-panel LEDs that indicate its status at a glance.

- The Active LED lights when there is a VGA signal at the input port.
- The Power LED lights when the Compact Video Splitter is powered by the 5-VDC power adapter.

Appendix. Troubleshooting

A.1 Calling Black Box

If you determine that your Compact Video Splitter is malfunctioning, do not attempt to alter or repair the unit. It contains no user-serviceable parts. Contact Black Box at 724-746-5500.

Before you do, make a record of the history of the problem. We will be able to provide more efficient and accurate assistance if you have a complete description, including:

- the nature and duration of the problem.
- when the problem occurs.
- the components involved in the problem.
- any particular application that, when used, appears to create the problem or make it worse.

A.2 Shipping and Packaging

If you need to transport or ship your Compact Video Splitter:

- Package it carefully. We recommend that you use the original container.
- If you are shipping the Compact Video Splitter for repair, make sure you include everything that came in the original package. Before you ship, contact Black Box to get a Return Authorization (RA) number.



© Copyright 2005. Black Box Corporation. All rights reserved.

1000 Park Drive • Lawrence, PA 15055-1018 • 724-746-5500 • Fax 724-746-0746